


Rear Compartment Lid Latch Cover Replacement

Removal Procedure



1. Use a small flat-bladed tool to pull and release the rear compartment lid latch cover (1) .
2. Rear Compartment Lid Latch Cover (1) » Remove

Installation Procedure

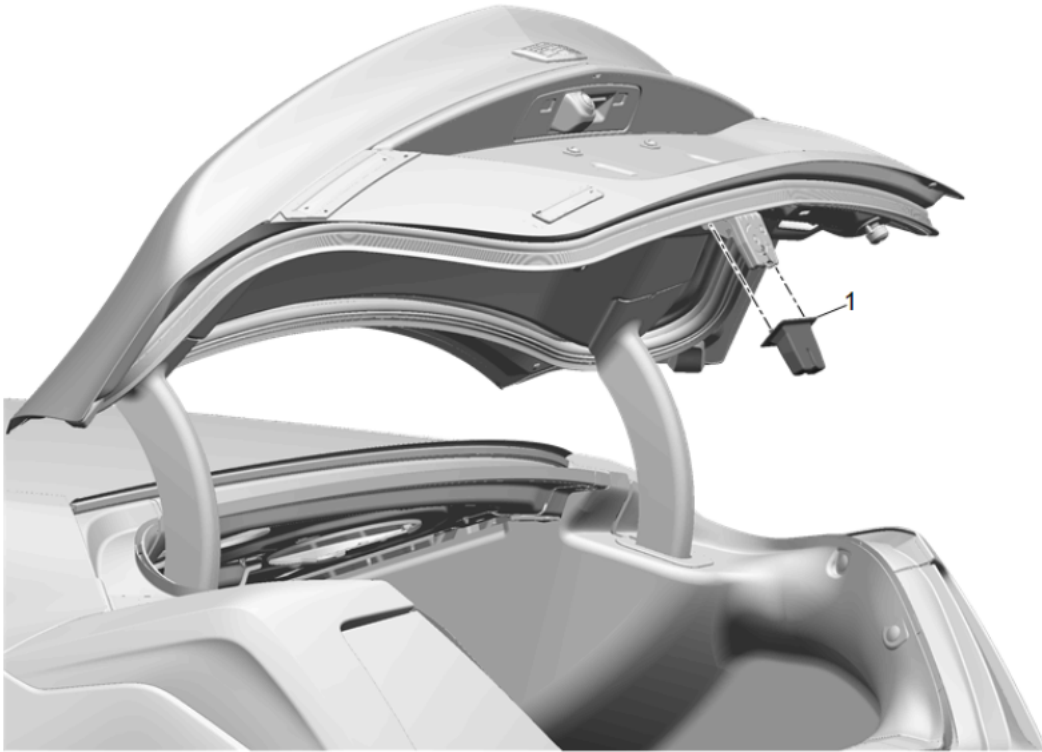

1. Rear Compartment Lid Latch Cover (1) » Install