

Body Emblem Package Installation (CT4)

Installation Instructions Part Number

85104921

Kit Contents

Qty	Description
2	Emblem (Door) – “V Series Blackwing” (if equipped)
1	Emblem (Rear Compartment Lid) – “AWD” (if equipped)
1	Emblem (Rear Compartment Lid) – “CT4”
1	Emblem (Rear Compartment Lid) – “V Series Blackwing” (if equipped)
1	Emblem (Rear Compartment Lid) – “350T” (if equipped)
1	Emblem (Rear Compartment Lid) – “500T” (if equipped)
1	Installation Instructions

Caution: Only install nameplates as a direct replacement of the existing vehicle content. Only install “V Series Blackwing” as a replacement of the existing vehicle content. If the vehicle content is “V series” only, discard “Blackwing” portion of the emblem.

Tools Required

- Masking Tape
- Rubber Roller
- Plastic Flat-Bladed Tool
- Isopropyl Alcohol Solution

Before you start


- Note:** Do not wash vehicle for 24 hours after installation of emblem/name plate.
- Note:** For the nameplate to adhere best, the vehicle’s mating surface (doors, rear compartment lid, etc.) should be free of damage (dents, scratches, creases, fractures, etc.).
- Caution:** Use a plastic, flat-bladed tool to prevent paint damage when removing an emblem/name plate.
- Caution:** Do not use heat gun or apply excessive heat to the emblem/nameplate as this may damage the paint and surrounding panel surfaces during removal.

1. The part and surface should be 21°C (70°F) prior to installation. The vehicle should remain 21°C (70°F) for one hour after assembly to allow adhesive to develop sufficient bond strength.
2. Wash the vehicle mating surfaces (Door or Rear Compartment LId) with a non-petroleum based cleaning product. If a stronger cleaner is required to remove any contaminants, use 3M® general purpose Adhesive Cleaner (P/N 08984). Then, thoroughly dry with a soft clean cloth.


Caution: Only install nameplates as a direct replacement of the existing vehicle content. Only install "V Series Blackwing" as a replacement of the existing vehicle content. If the vehicle content is "V series" only, discard "Blackwing" portion of the emblem.

Procedure

Door Emblem (V Series)

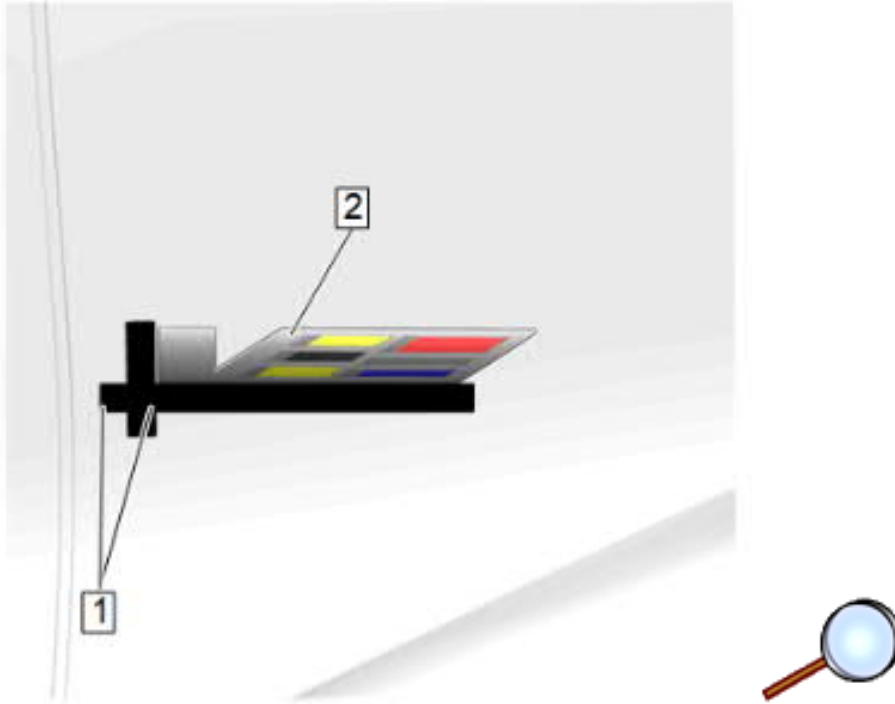


1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and bottom edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the chrome nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

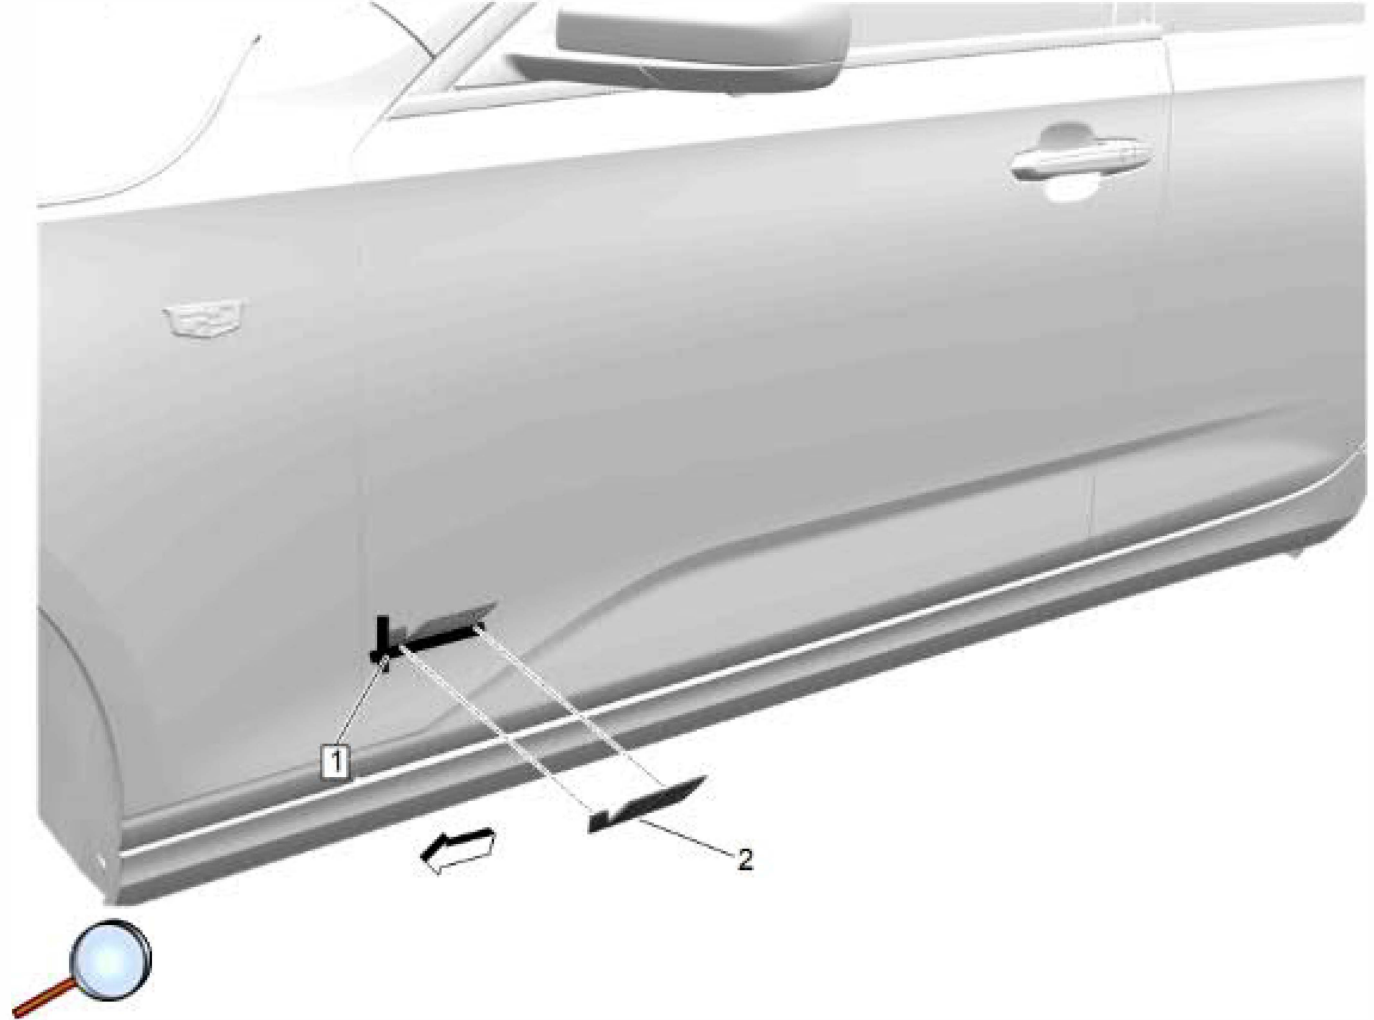


4. Take the nameplate (2) and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the emblem lettering to the masking tape (1). Then, toggle the nameplate into place.
6. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the emblem/name plate to the mating surface to ensure full adhesion of the nameplate is made.
7. Remove masking tape.
8. Repeat the same procedure for the opposite side.

Door Emblem (V Series Blackwing)

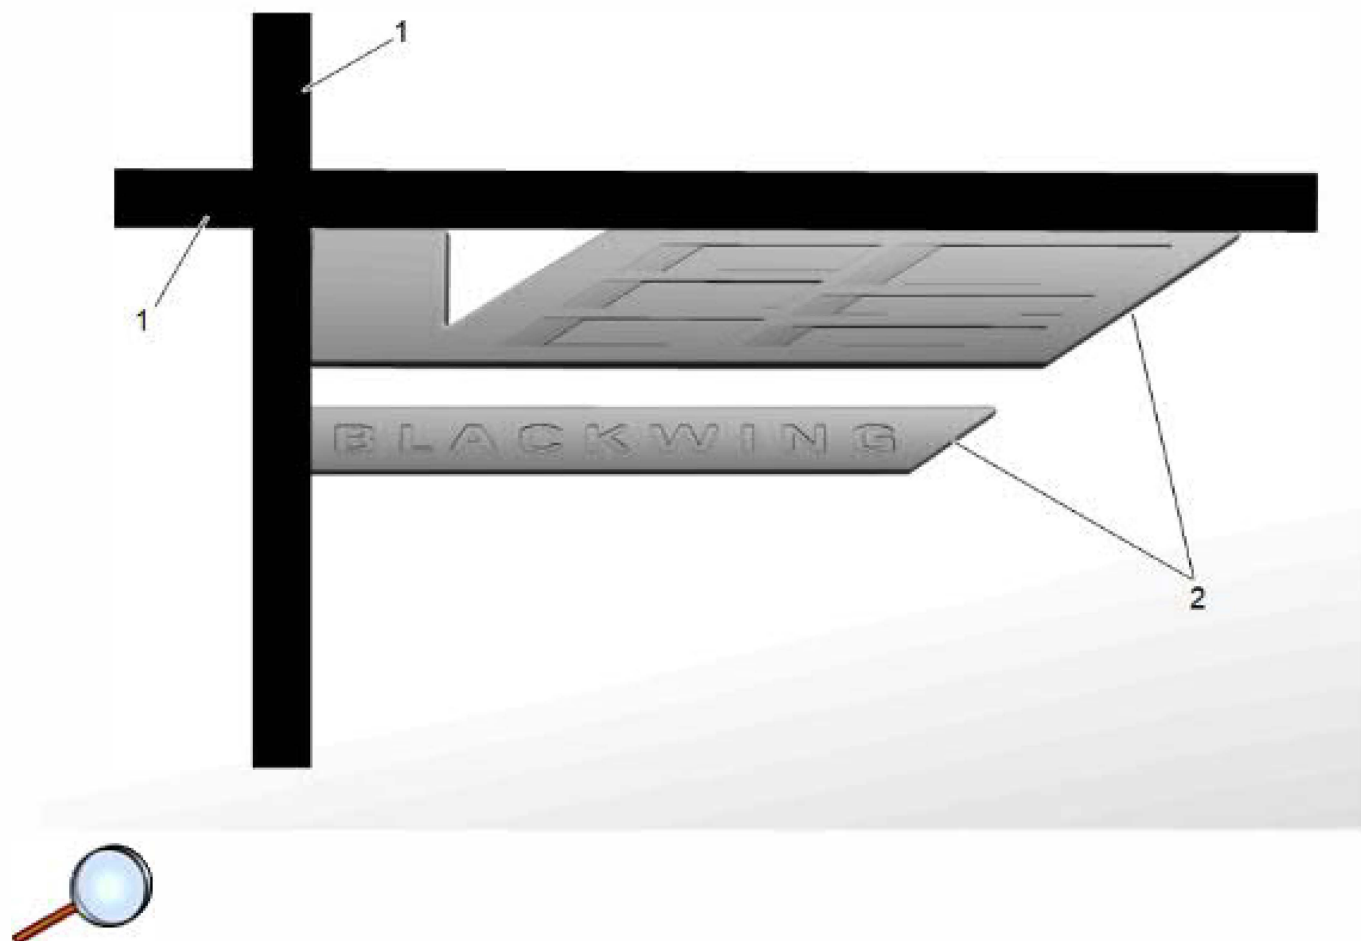


Note: Only install "V Series Blackwing" as a replacement of the existing vehicle content.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and top edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the existing nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

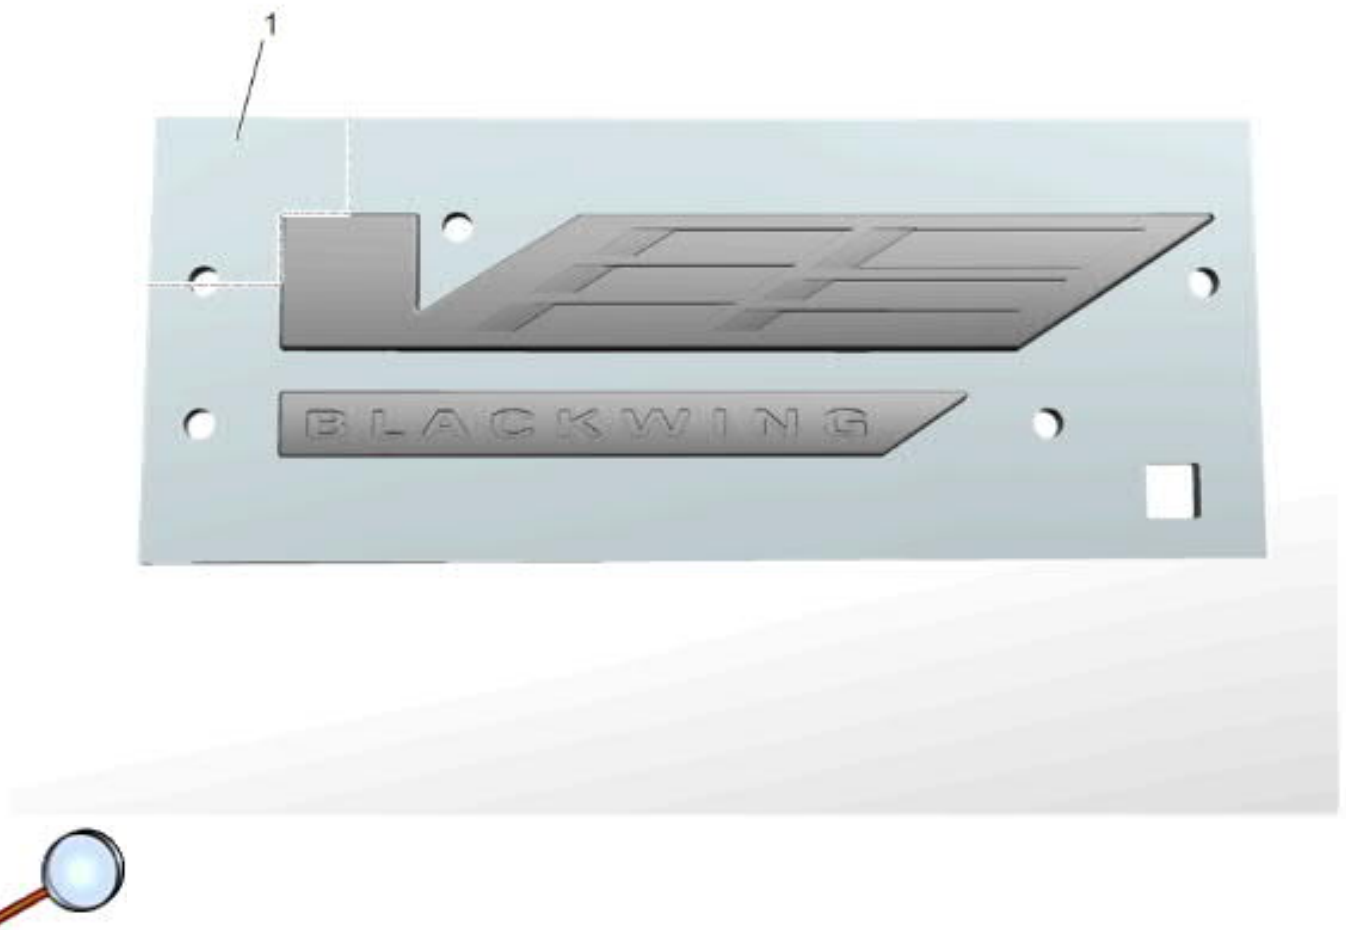


4. Carefully cut out notch (1) as shown in the foam carrier without damaging or misaligning any of the nameplate. The notch will provide point of reference to help align the nameplates to the tape.
5. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.

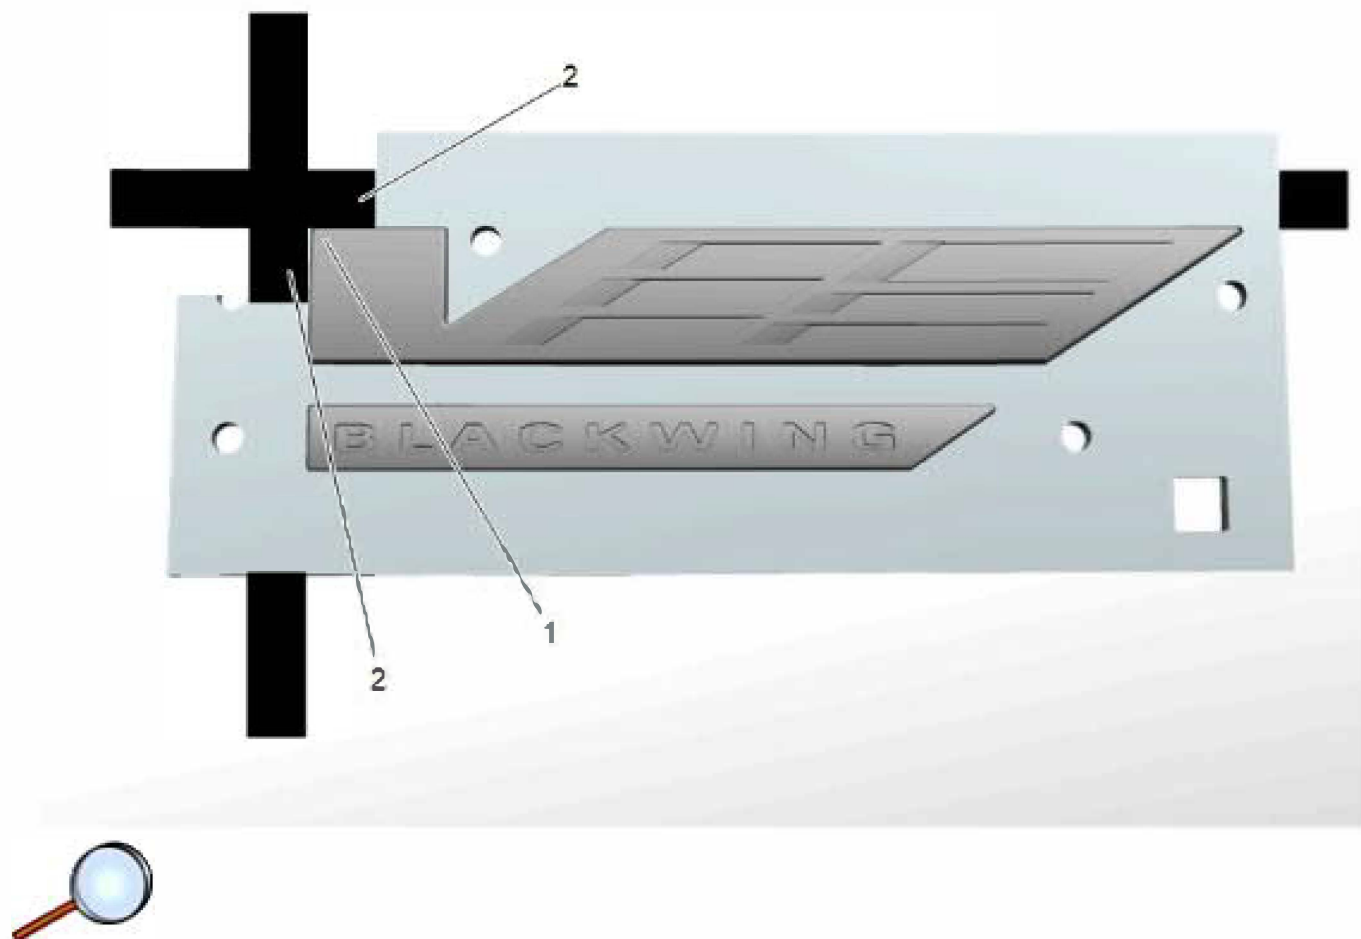

Note: Make sure the foam carrier and nameplate stay together during installation.


6. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the left side and top edge of the nameplate (1) to the masking tape (2). Then, toggle the nameplate into place.
7. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the name plate to the mating surface to ensure full adhesion of the nameplate is made.
8. Remove the foam carrier and the protective liner from the front of the nameplate.
9. Remove masking tape.
10. Repeat the same procedure for the opposite side.

Rear Compartment Lid Emblem (AWD)

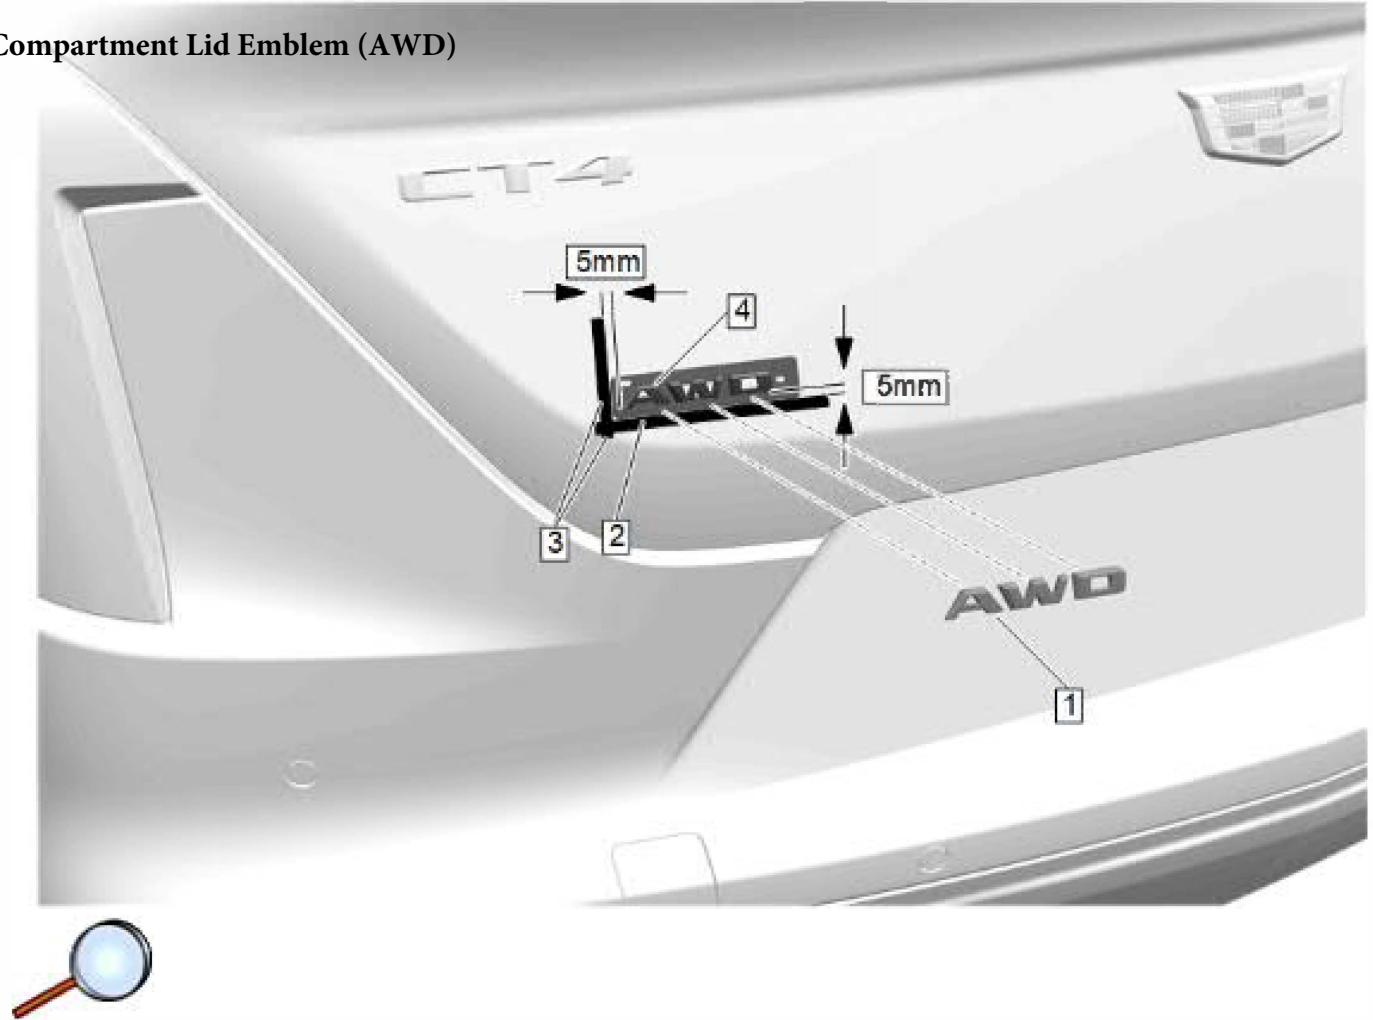


1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 5mm to the left and 5mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Rear Compartment Lid Emblem (CT4)

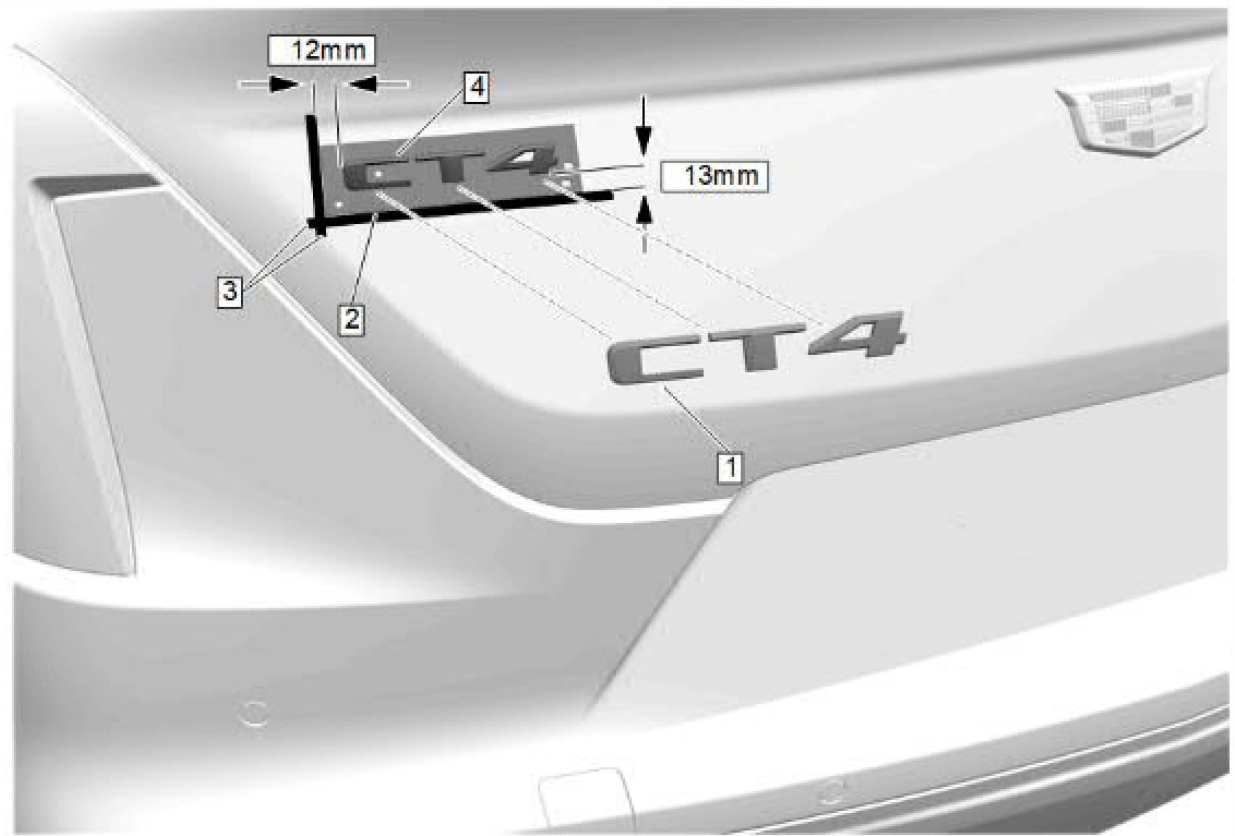


1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 12mm to the left and 13mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Rear Compartment Lid Emblem (V Series)

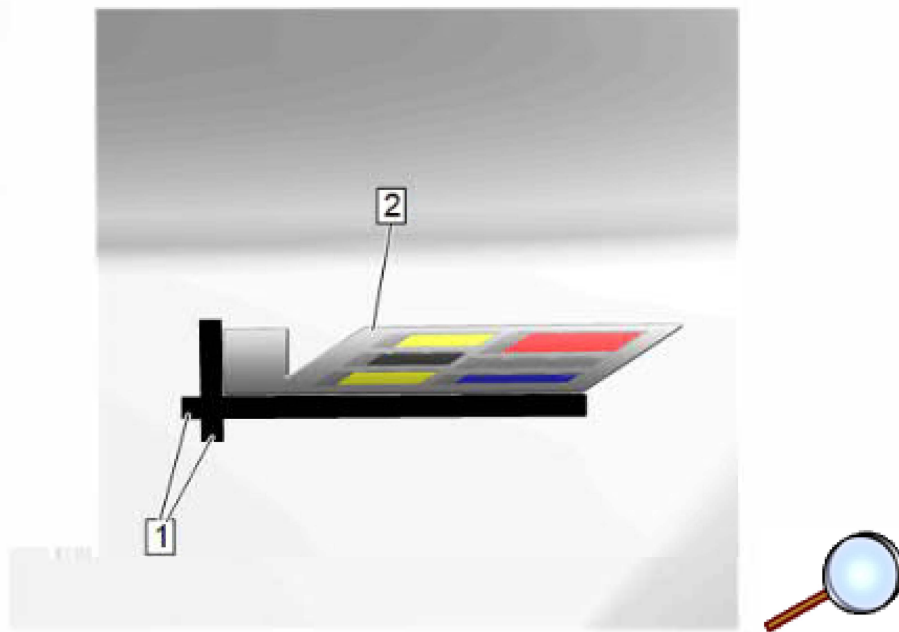


Note: If the vehicle content is "V series" only, discard "Blackwing" portion of the emblem.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and bottom edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the chrome nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

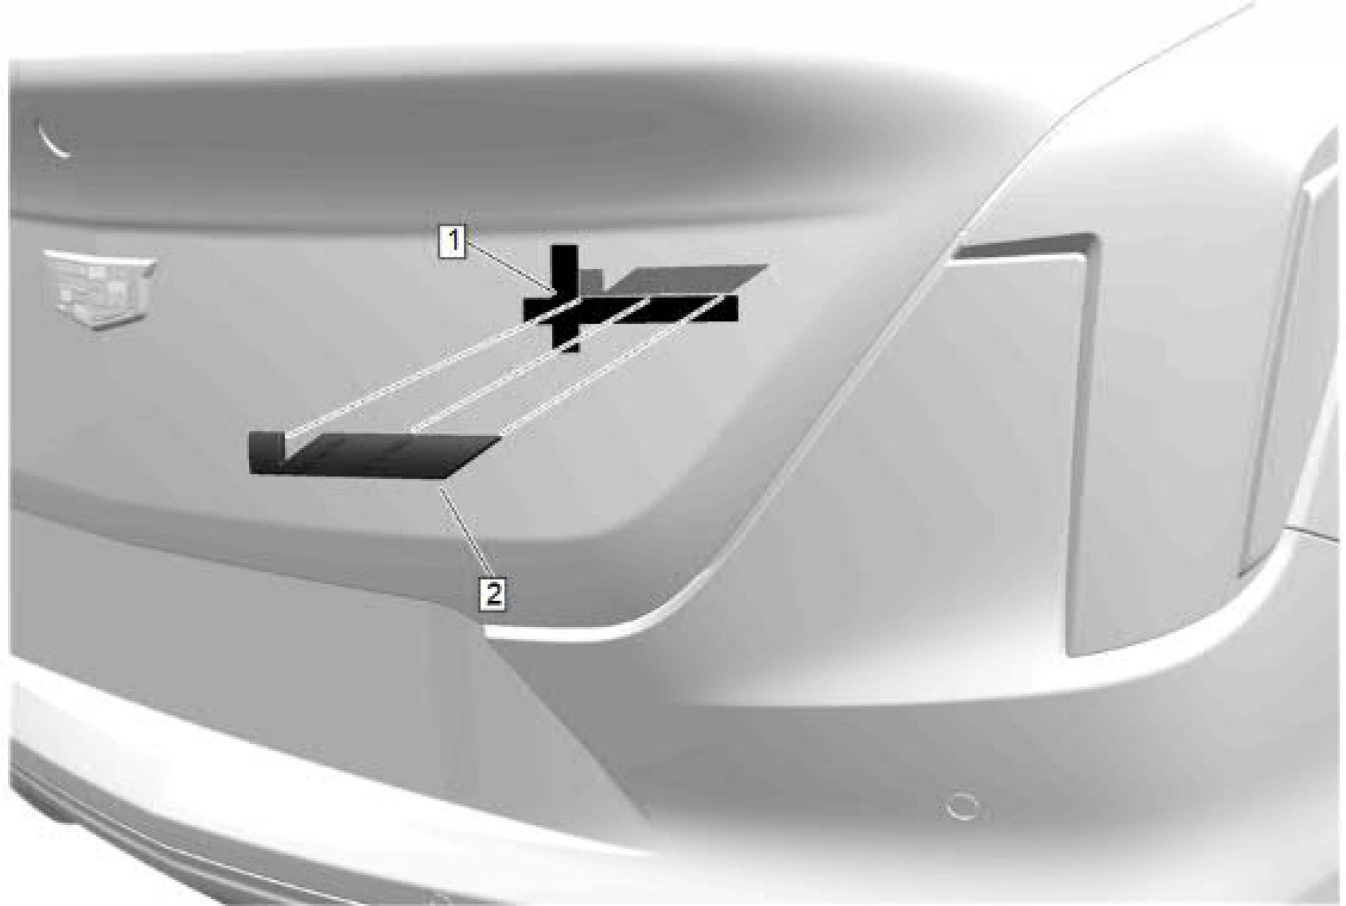


4. Take the nameplate (2) and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the emblem lettering to the masking tape (1). Then, toggle the nameplate into place.
6. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the emblem/name plate to the mating surface to ensure full adhesion of the nameplate is made.
7. Remove masking tape.

Rear Compartment Lid Emblem (V Series Blackwing)

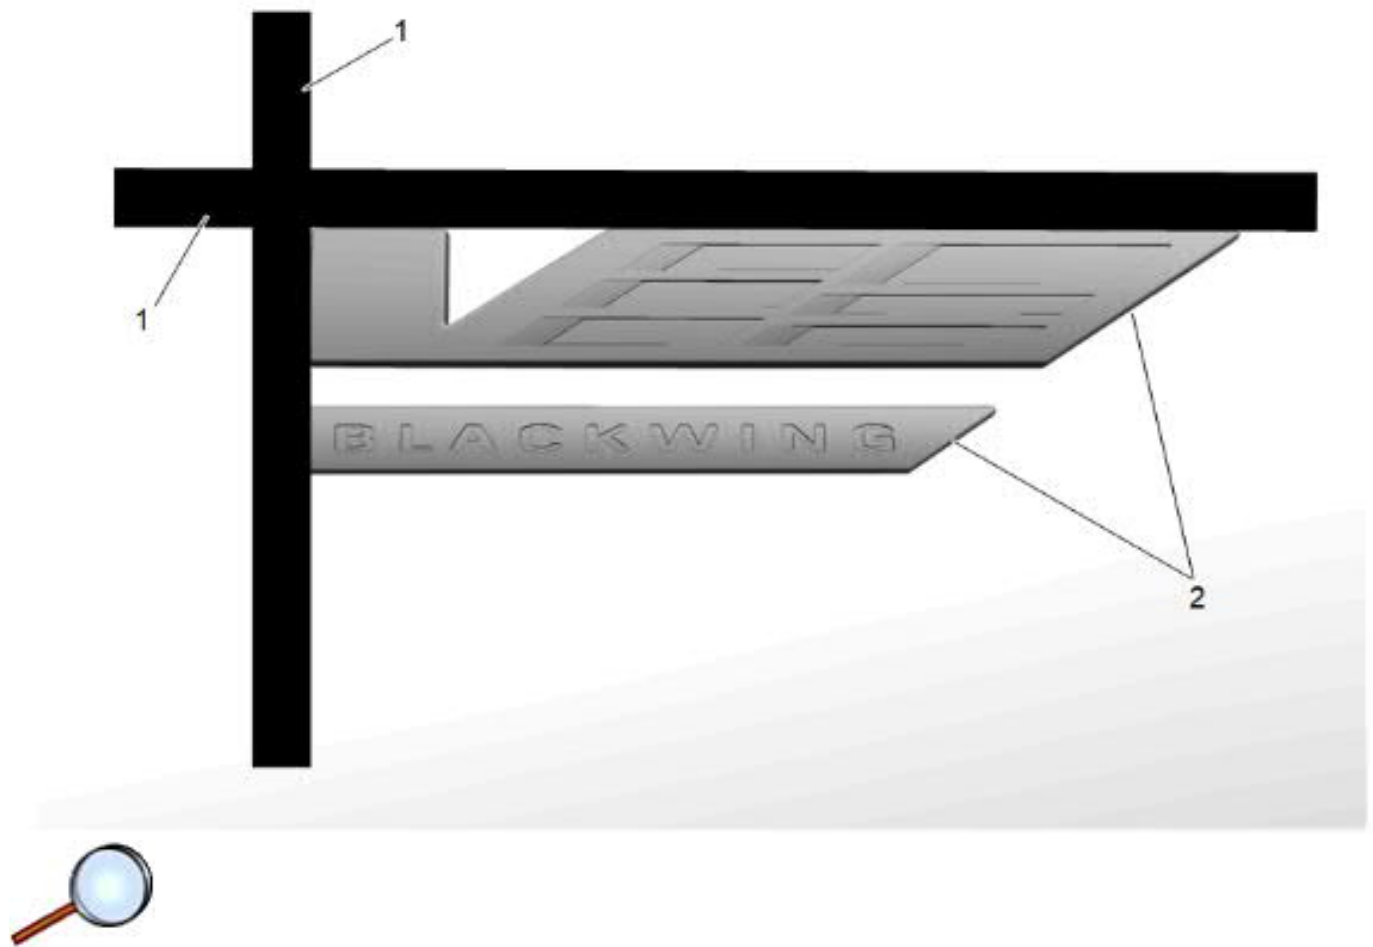


Note: Only install "V Series Blackwing" as a replacement of the existing vehicle content.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and top edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the existing nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

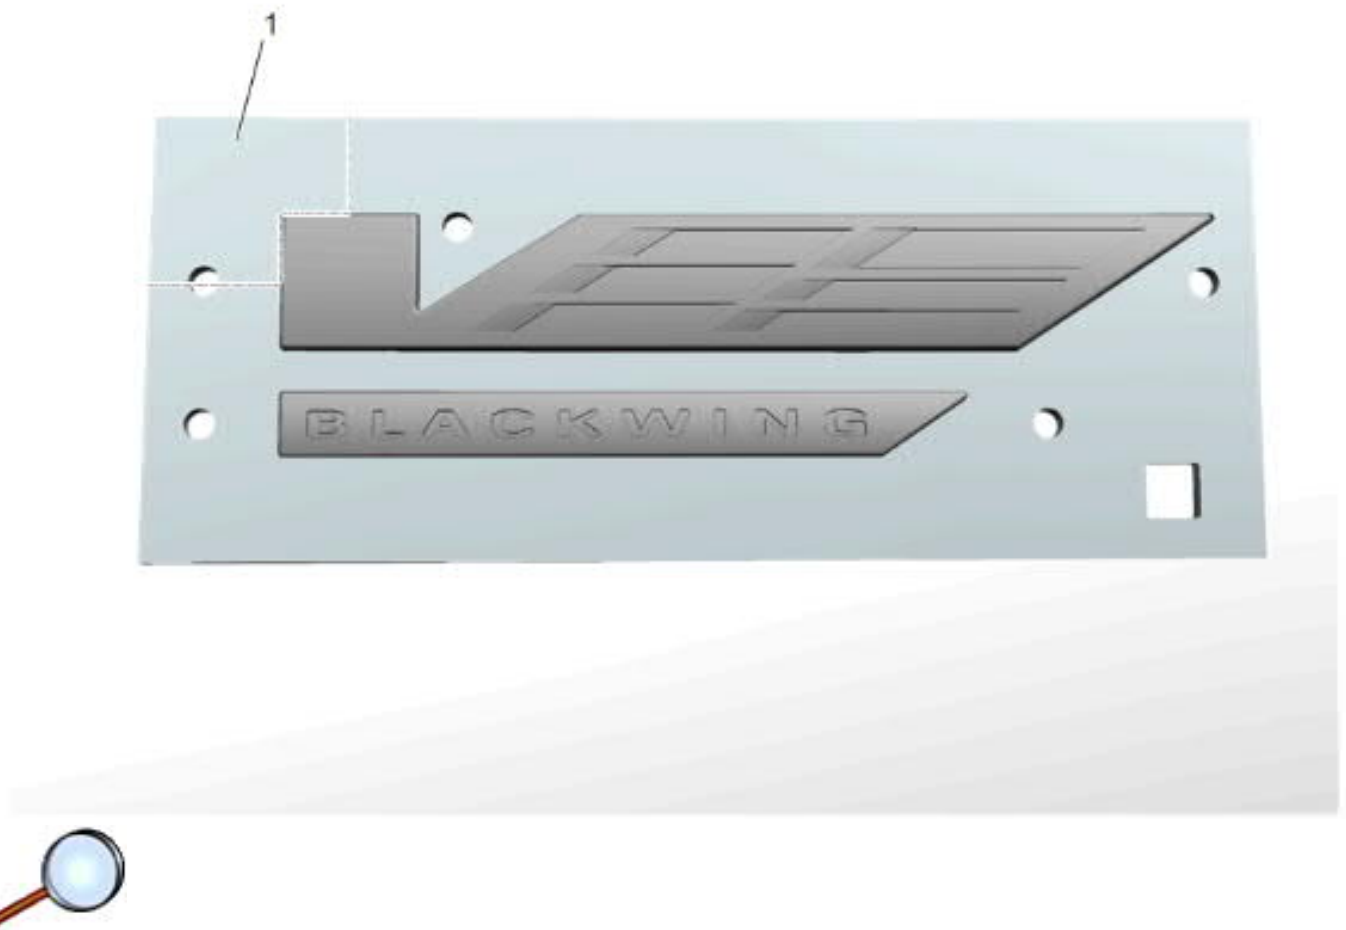


4. Carefully cut out notch (1) as shown in the foam carrier without damaging or misaligning any of the nameplate. The notch will provide point of reference to help align the nameplates to the tape.
5. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.

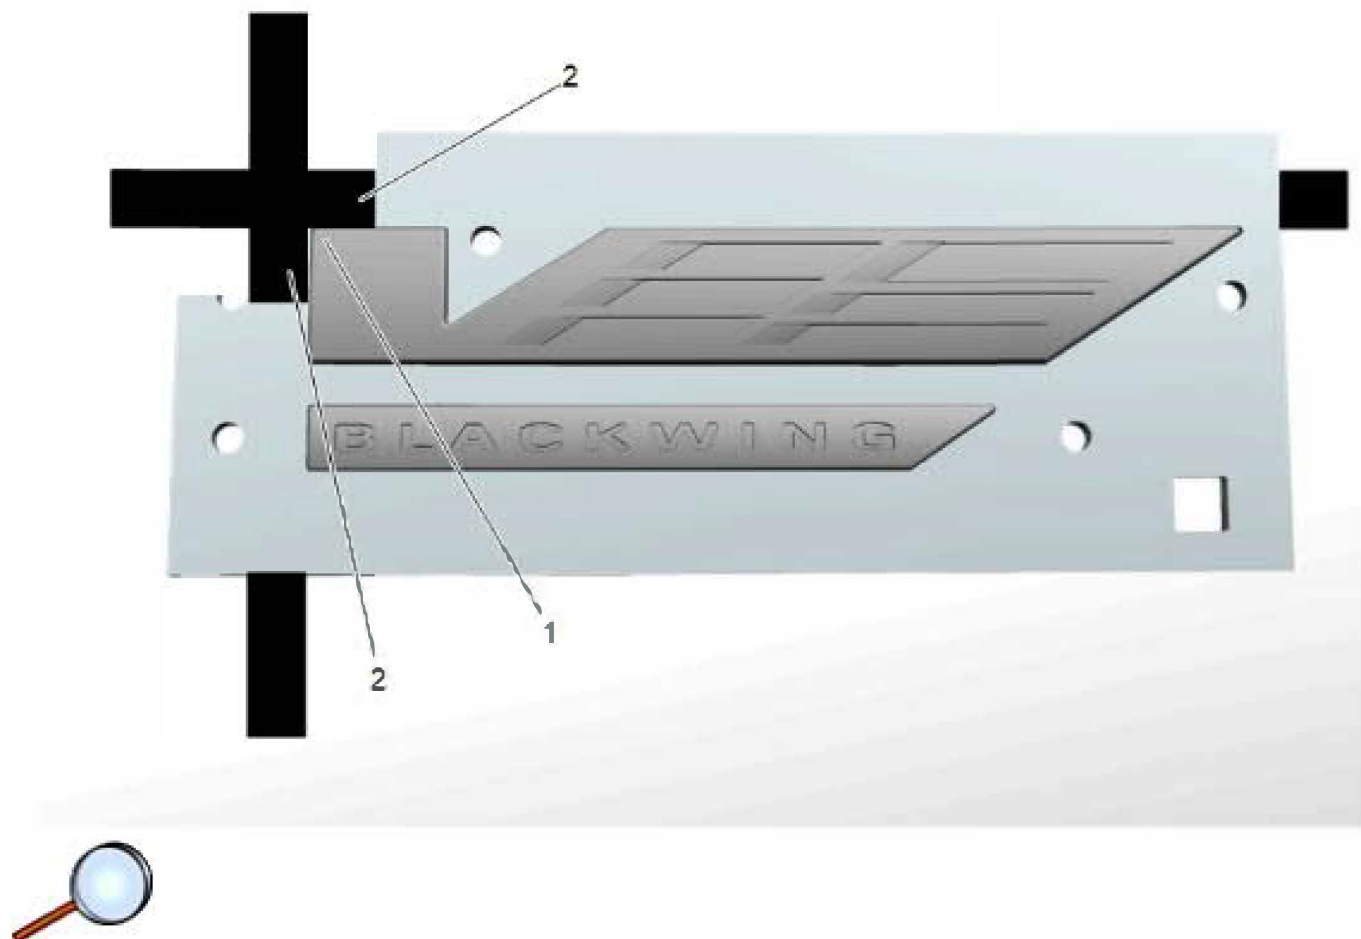

Note: Make sure the foam carrier and nameplate stay together during installation.


6. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the left side and top edge of the nameplate (1) to the masking tape (2). Then, toggle the nameplate into place.
7. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the name plate to the mating surface to ensure full adhesion of the nameplate is made.
8. Remove the foam carrier and the protective liner from the front of the nameplate.
9. Remove masking tape.

Rear Compartment Lid Emblem (350T)

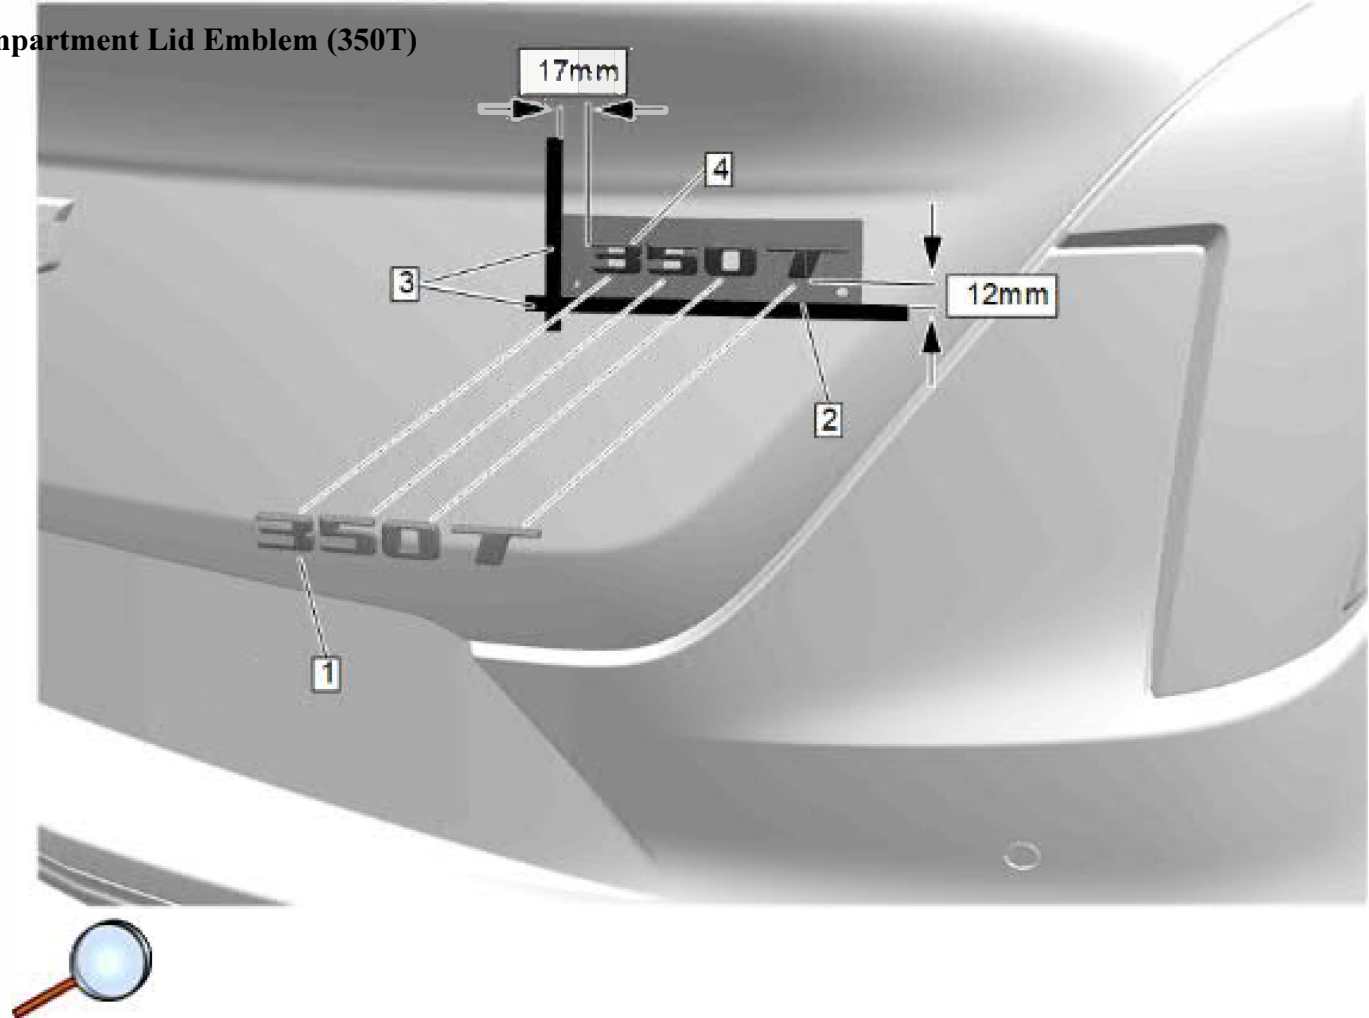

1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 17mm to the left and 12mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Rear Compartment Lid Emblem (500T)

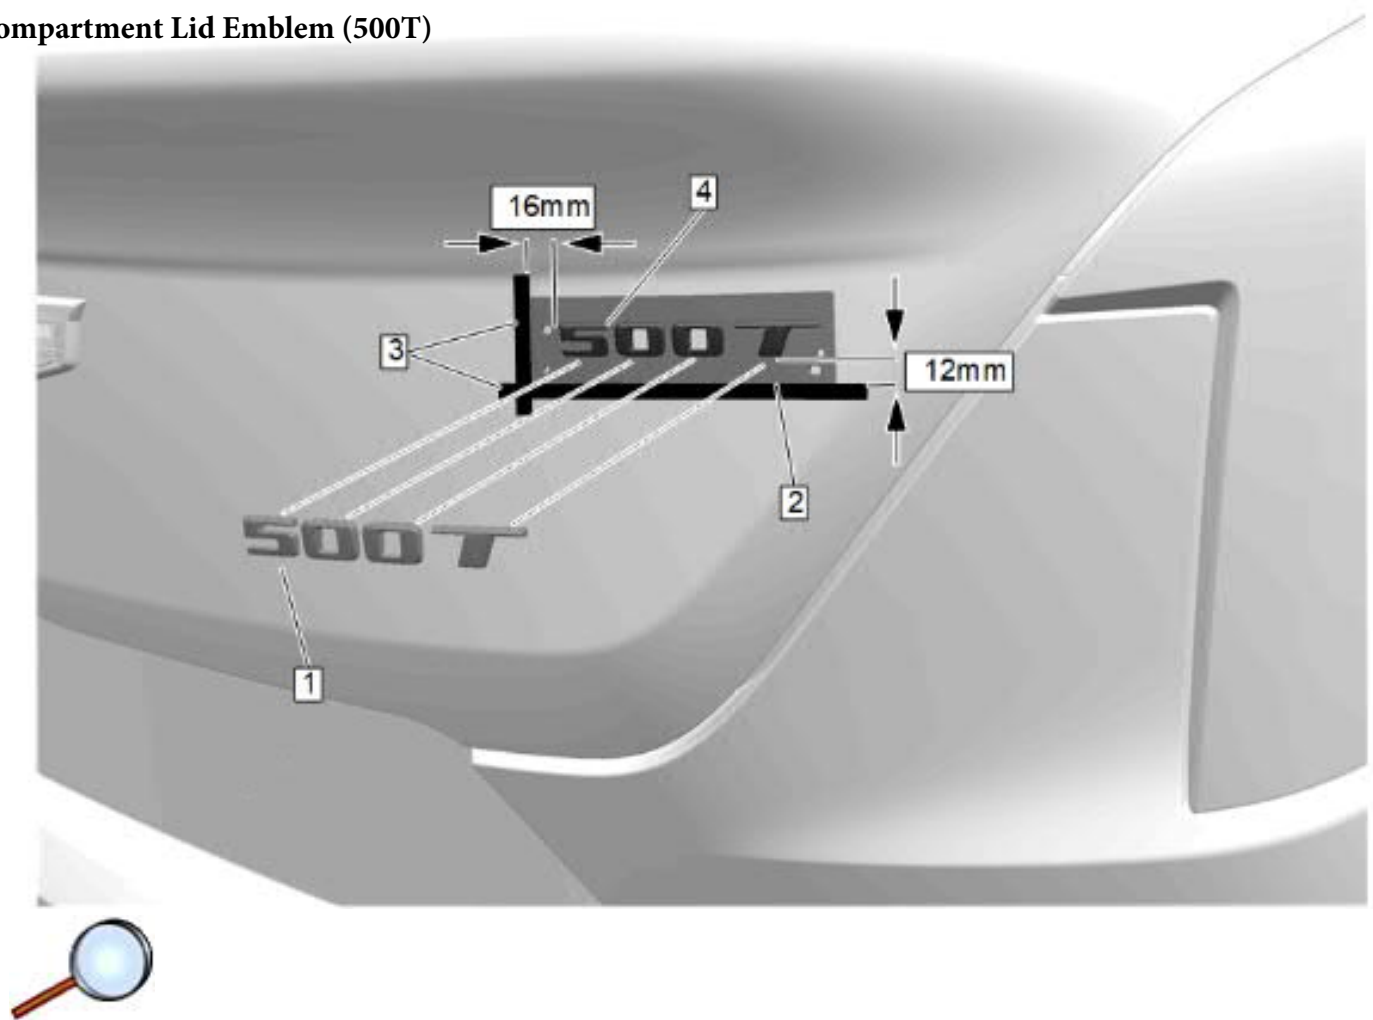

1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 16mm to the left and 12mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Body Emblem Package Installation (CT5)

Installation Instructions Part Number

85104921

Kit Contents

Qty	Description
2	Emblem (Fender) – “V Series” – (if equipped)
2	Emblem (Fender) – “V Series Blackwing” – (if equipped)
1	Emblem (Rear Compartment Lid) – “AWD” – (if equipped)
1	Emblem (Rear Compartment Lid) – “CT5”
1	Emblem (Rear Compartment Lid) – “V Series” – (if equipped)
1	Emblem (Rear Compartment Lid) – “V Series Blackwing” (if equipped)
1	Emblem (Rear Compartment Lid) – “350T” (if equipped)
1	Emblem (Rear Compartment Lid) – “550T” (if equipped)
1	Installation Instructions

Caution: Only install nameplates as a direct replacement of the existing vehicle content. Only install “V Series Blackwing” as a replacement of the existing vehicle content. If the vehicle content is “V series” only, discard “Blackwing” portion of the emblem.

Tools Required

- Masking Tape
- Rubber Roller
- Plastic Flat-Bladed Tool
- Isopropyl Alcohol Solution

Before you start

- Note:** Do not wash vehicle for 24 hours after installation of emblem/name plate.
- Note:** For the nameplate to adhere best, the vehicle’s mating surface (fender, rear compartment lid, etc.) should be free of damage (dents, scratches, creases, fractures, etc.).

Caution: Use a plastic, flat-bladed tool to prevent paint damage when removing an emblem/name plate.


Caution: Do not use heat gun or apply excessive heat to the emblem/nameplate as this may damage the paint and surrounding panel surfaces during removal.

1. The part and surface should be 21°C (70°F) prior to installation. The vehicle should remain 21°C (70°F) for one hour after assembly to allow adhesive to develop sufficient bond strength.
2. Wash the vehicle mating surfaces (Fender or Rear Compartment Lid) with a non-petroleum based cleaning product. If a stronger cleaner is required to remove any contaminants, use 3M® general purpose Adhesive Cleaner (P/N 08984). Then, thoroughly dry with a soft clean cloth.


Caution: Only install nameplates as a direct replacement of the existing vehicle content. Only install "V Series Blackwing" as a replacement of the existing vehicle content. If the vehicle content is "V series" only, discard "Blackwing" portion of the emblem.

Procedure

Fender Emblem (V Series)

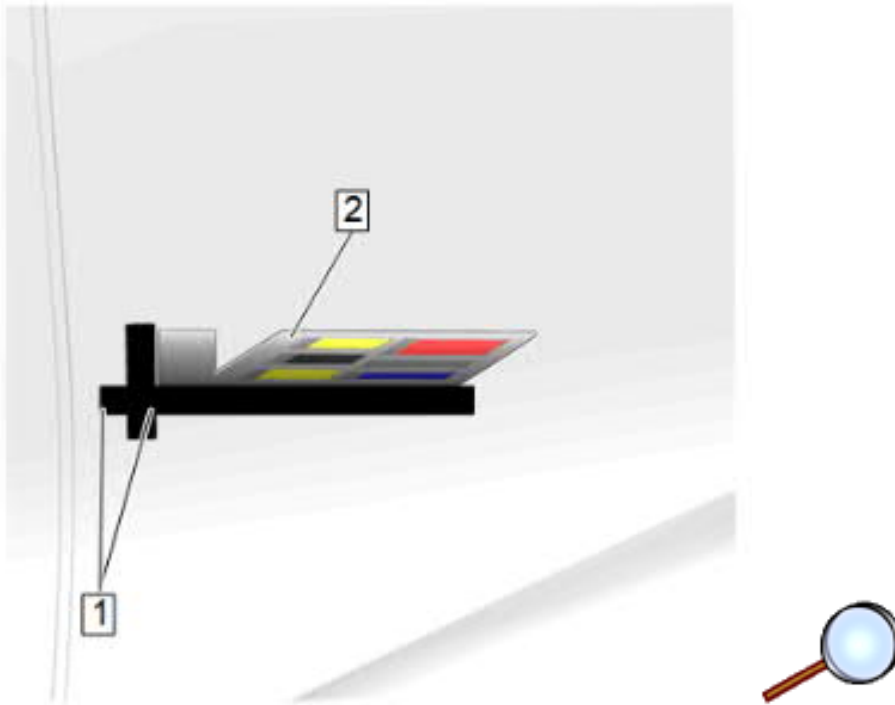


1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and bottom edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the chrome nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

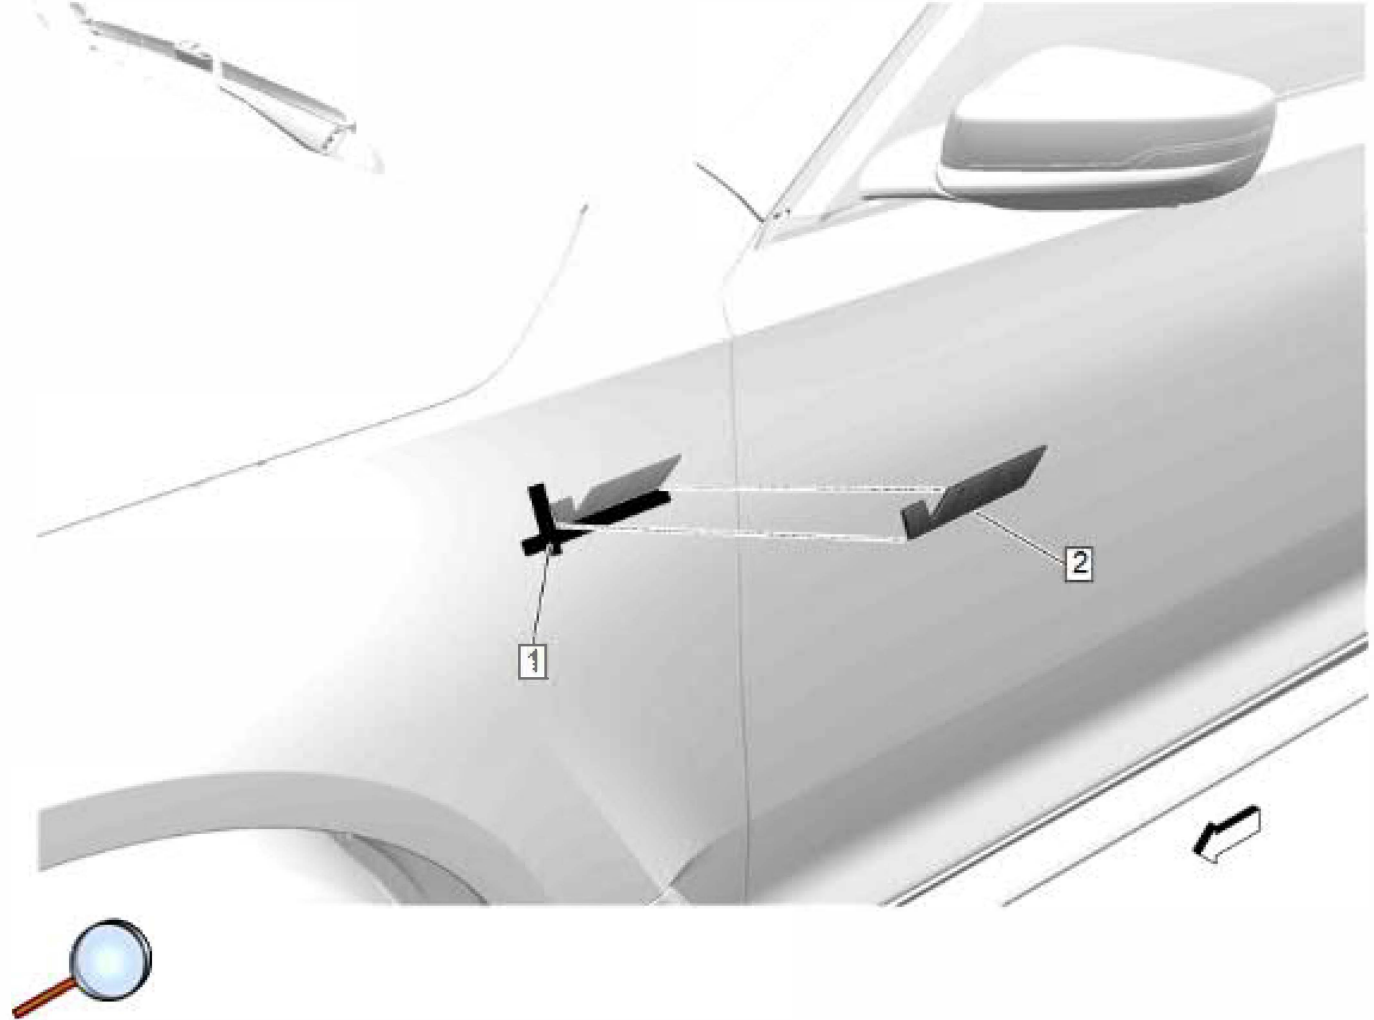


4. Take the nameplate (2) and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the emblem lettering to the masking tape (1). Then, toggle the nameplate into place.
6. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the emblem/name plate to the mating surface to ensure full adhesion of the nameplate is made.
7. Remove masking tape.
8. Repeat the same procedure for the opposite side.

Fender Emblem (V Series Blackwing)

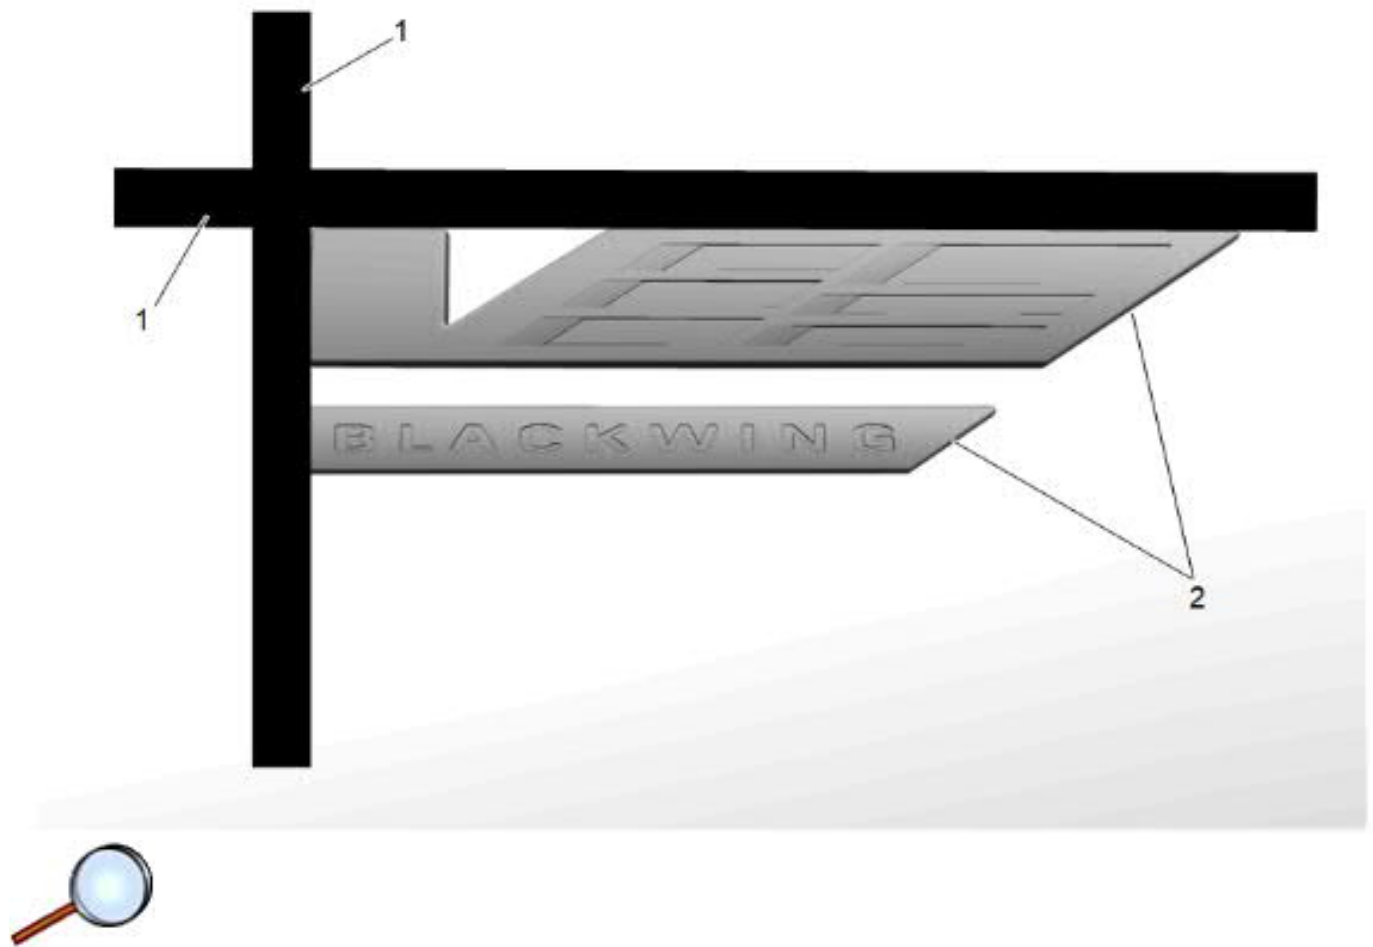


Note: Only install "V Series Blackwing" as a replacement of the existing vehicle content.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and top edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the existing nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

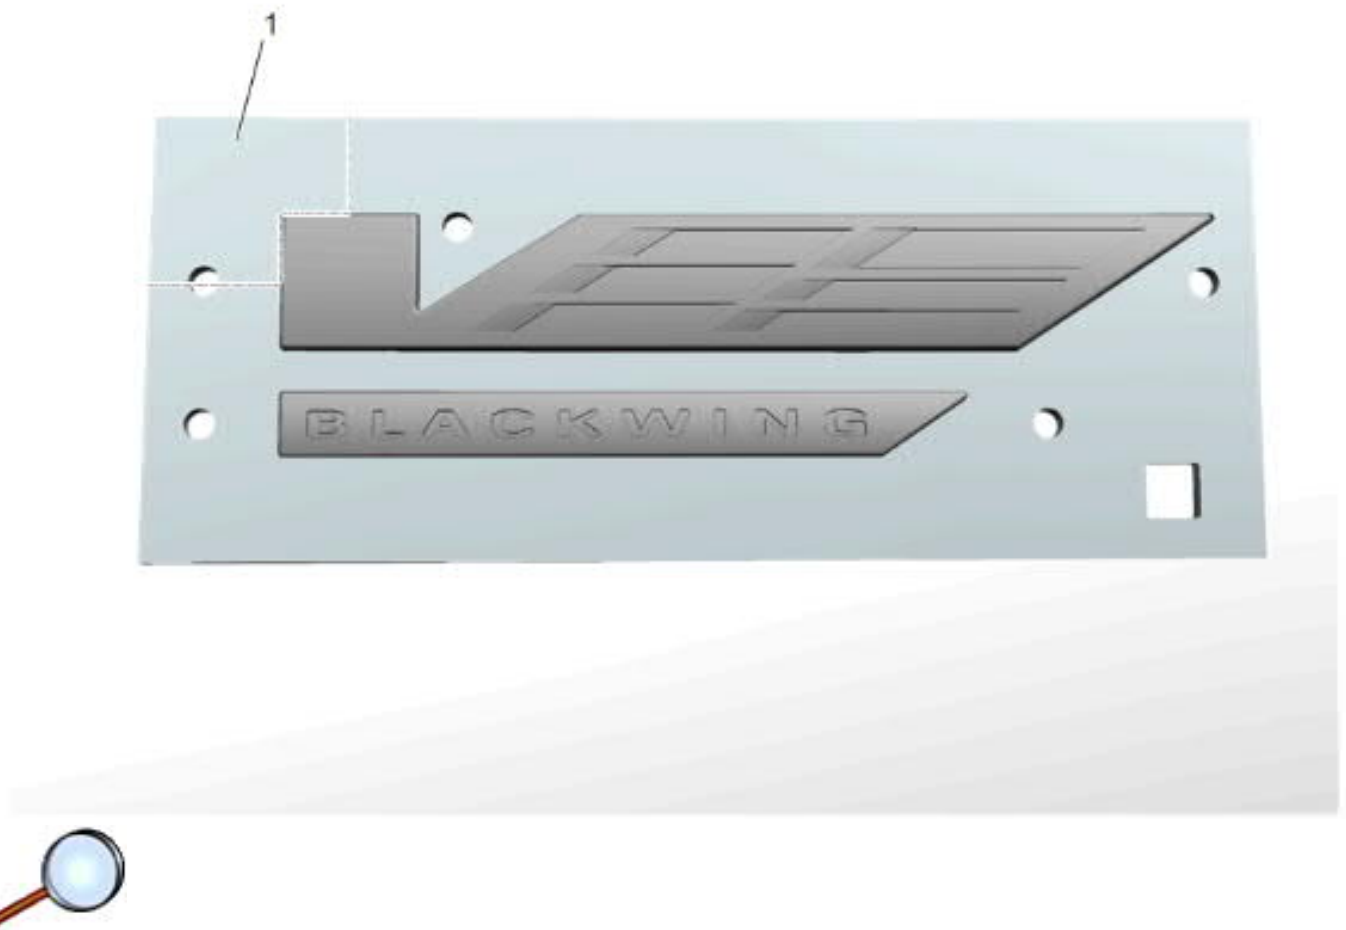


4. Carefully cut out notch (1) as shown in the foam carrier without damaging or misaligning any of the nameplate. The notch will provide point of reference to help align the nameplates to the tape.
5. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.

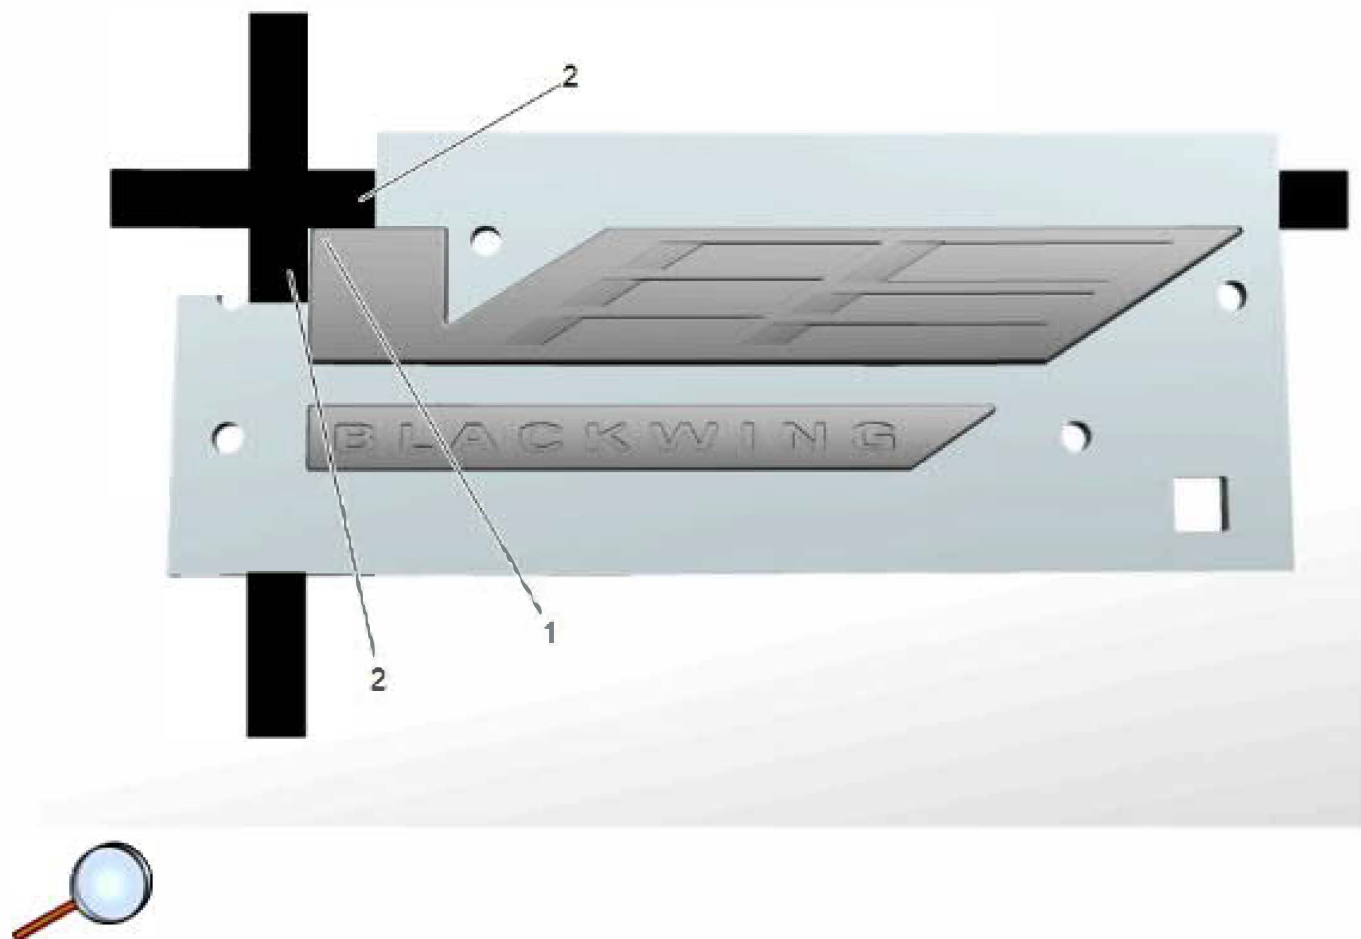

Note: Make sure the foam carrier and nameplate stay together during installation.


6. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the left side and top edge of the nameplate (1) to the masking tape (2). Then, toggle the nameplate into place.
7. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the name plate to the mating surface to ensure full adhesion of the nameplate is made.
8. Remove the foam carrier and the protective liner from the front of the nameplate.
9. Remove masking tape.
10. Repeat the same procedure for the opposite side.

Rear Compartment Lid Emblem (AWD)

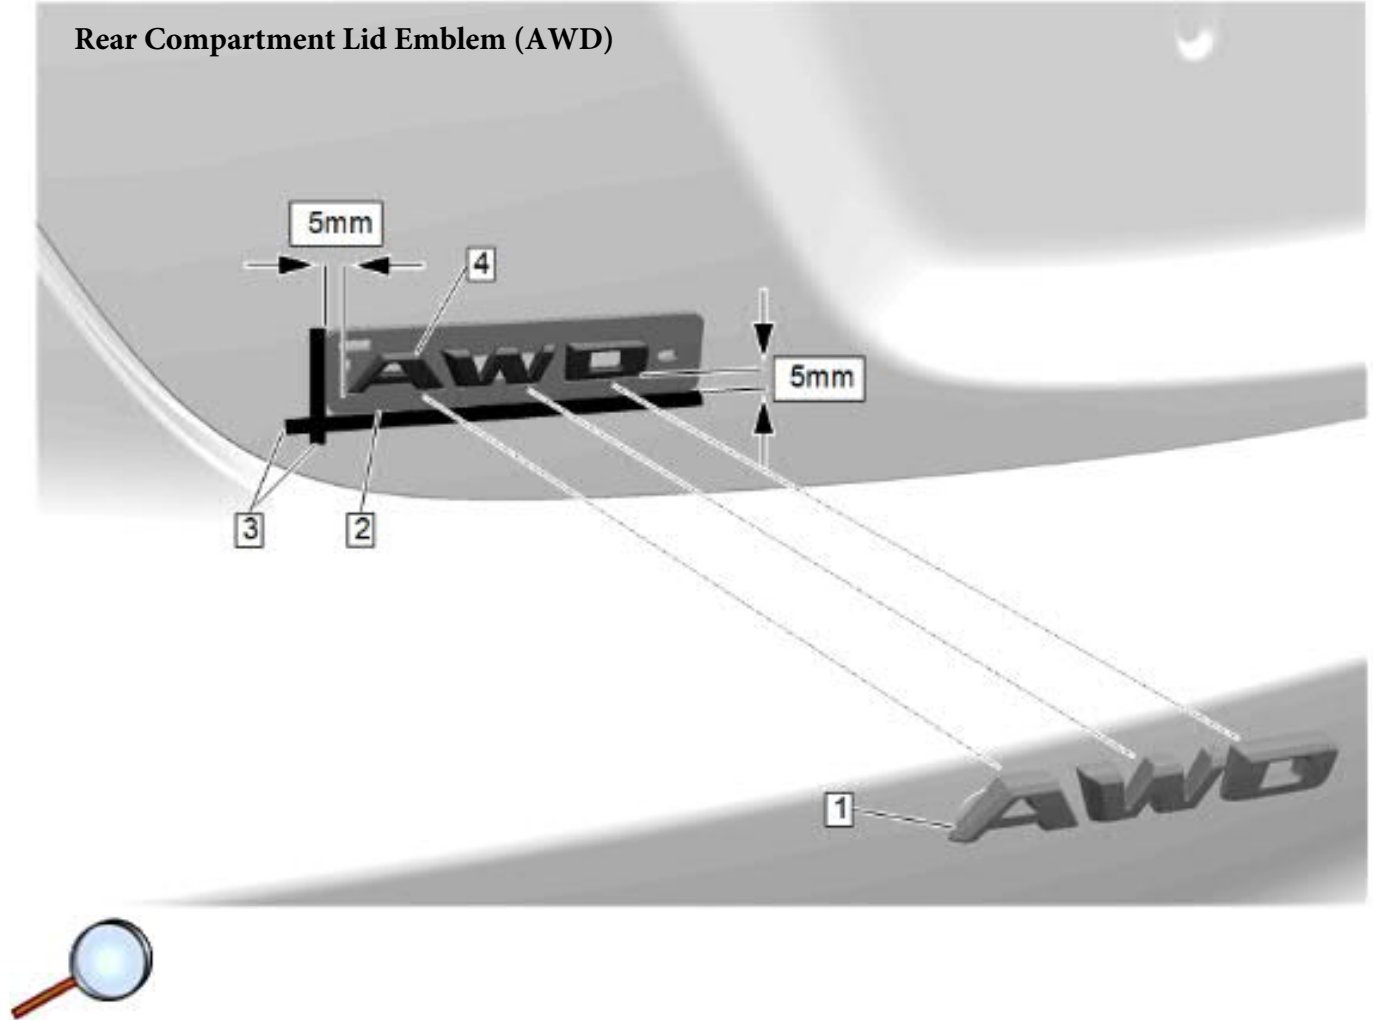


1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 5mm to the left and 5mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Rear Compartment Lid Emblem (CT5)

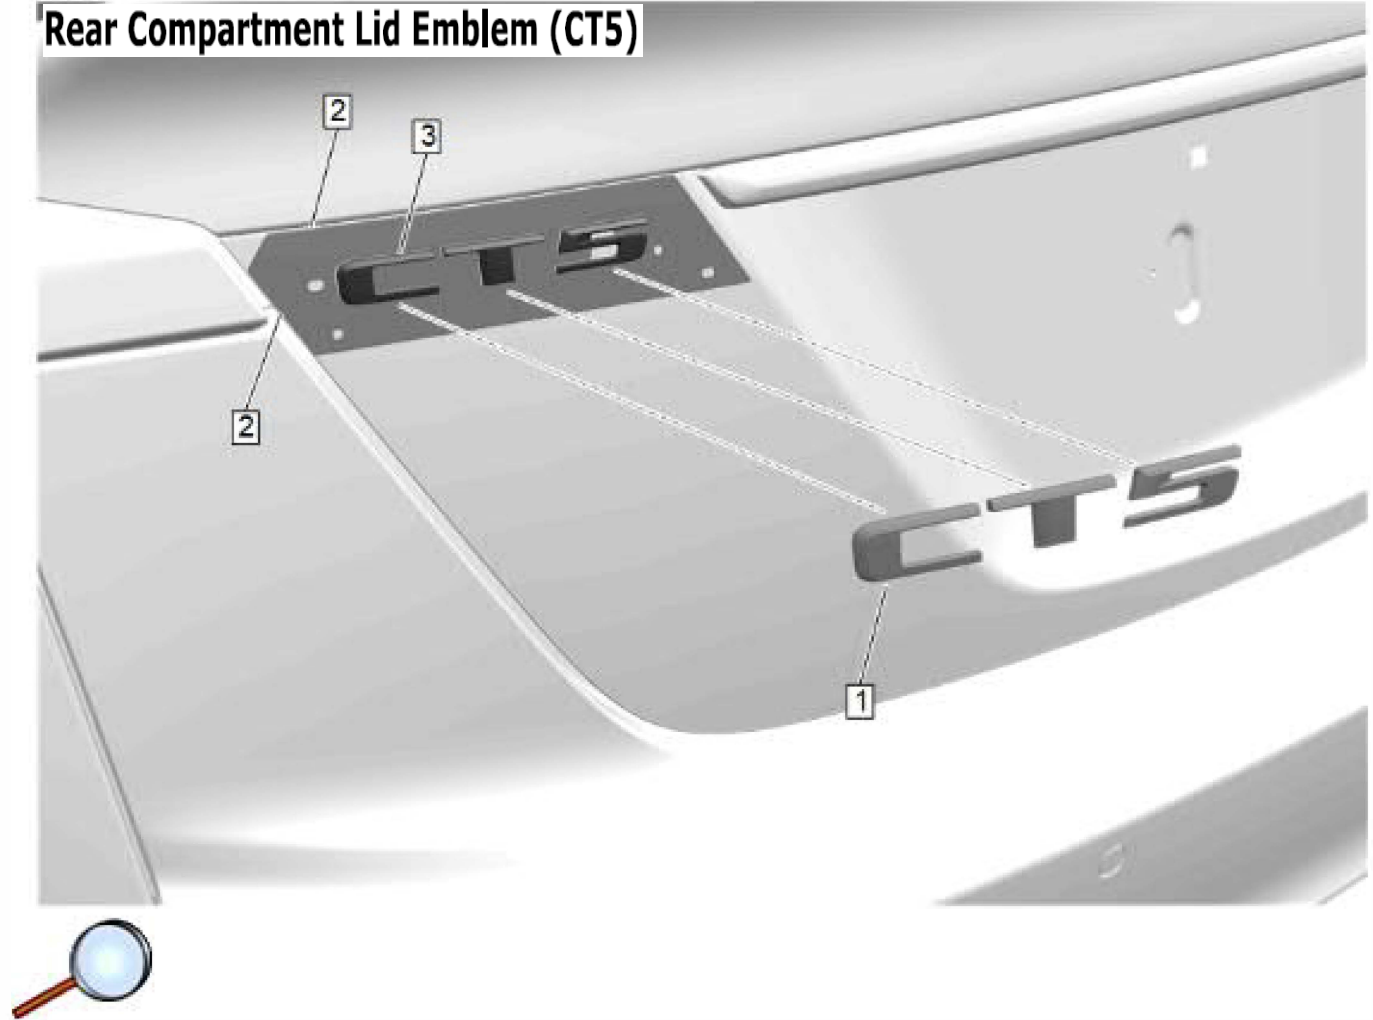


1. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 2. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 3. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
4. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the left and top edges of the foam carrier (2) of the nameplate to the body features. Then, toggle the nameplate (3) with foam carrier (2) into place.
 5. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 6. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 7. Remove masking tape.

Rear Compartment Lid Emblem (V Series)

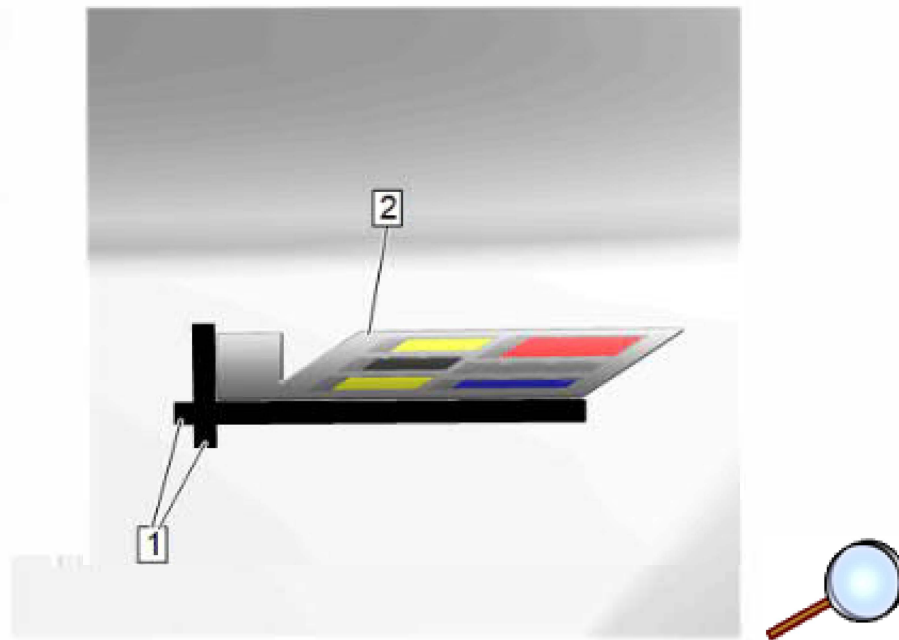


Note: If the vehicle content is "V series" only, discard "Blackwing" portion of the emblem.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and bottom edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the chrome nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

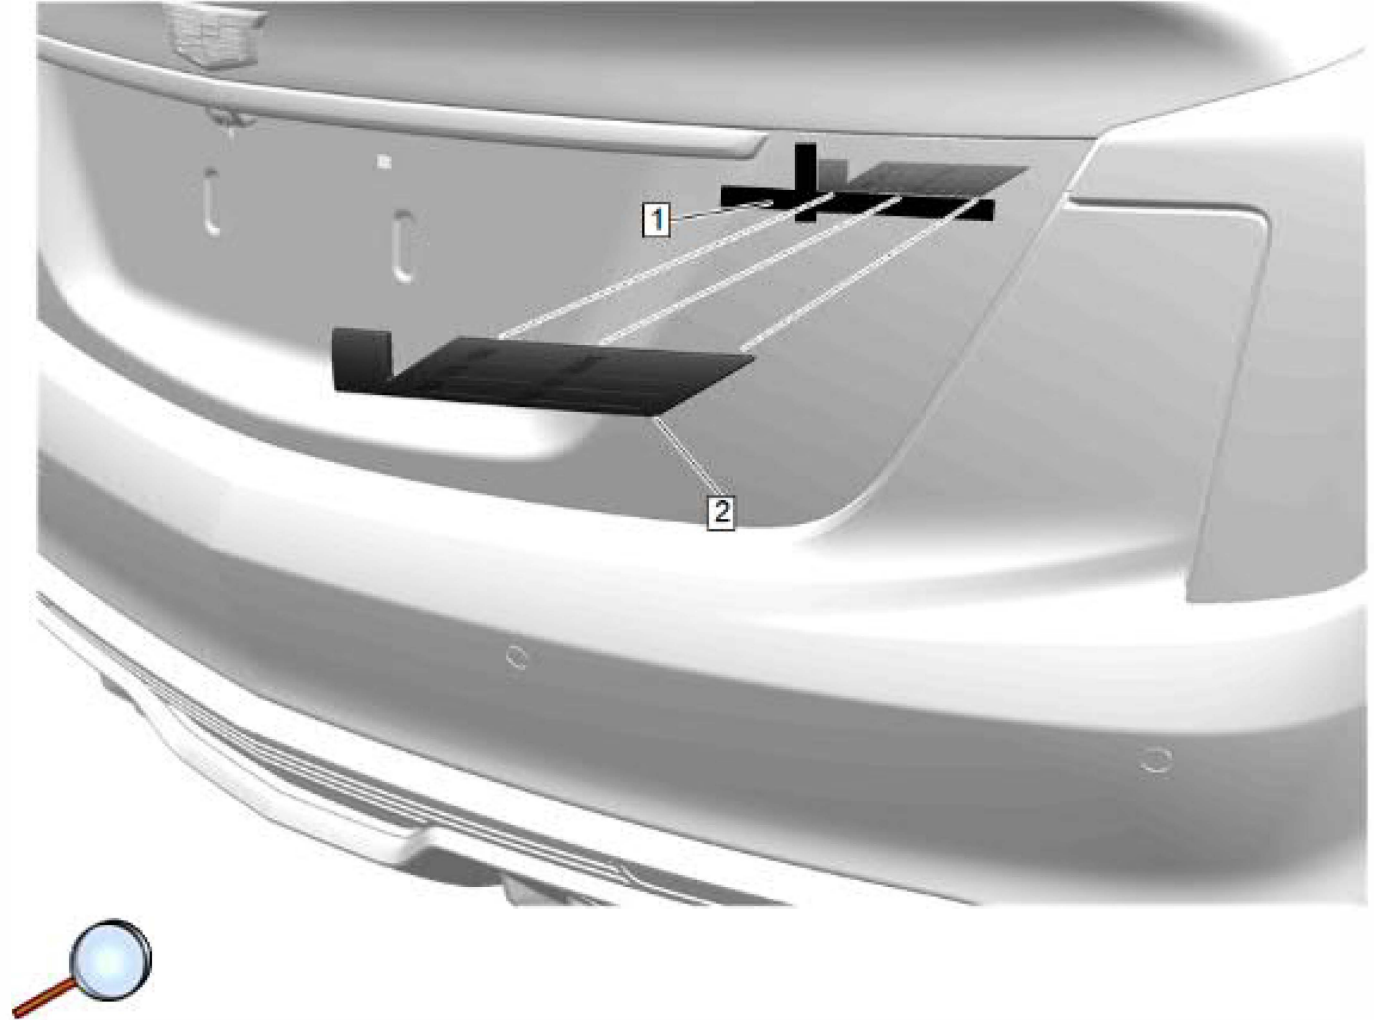


4. Take the nameplate (2) and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the emblem lettering to the masking tape (1). Then, toggle the nameplate into place.
6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
7. Remove masking tape.

Rear Compartment Lid Emblem (V Series Blackwing)

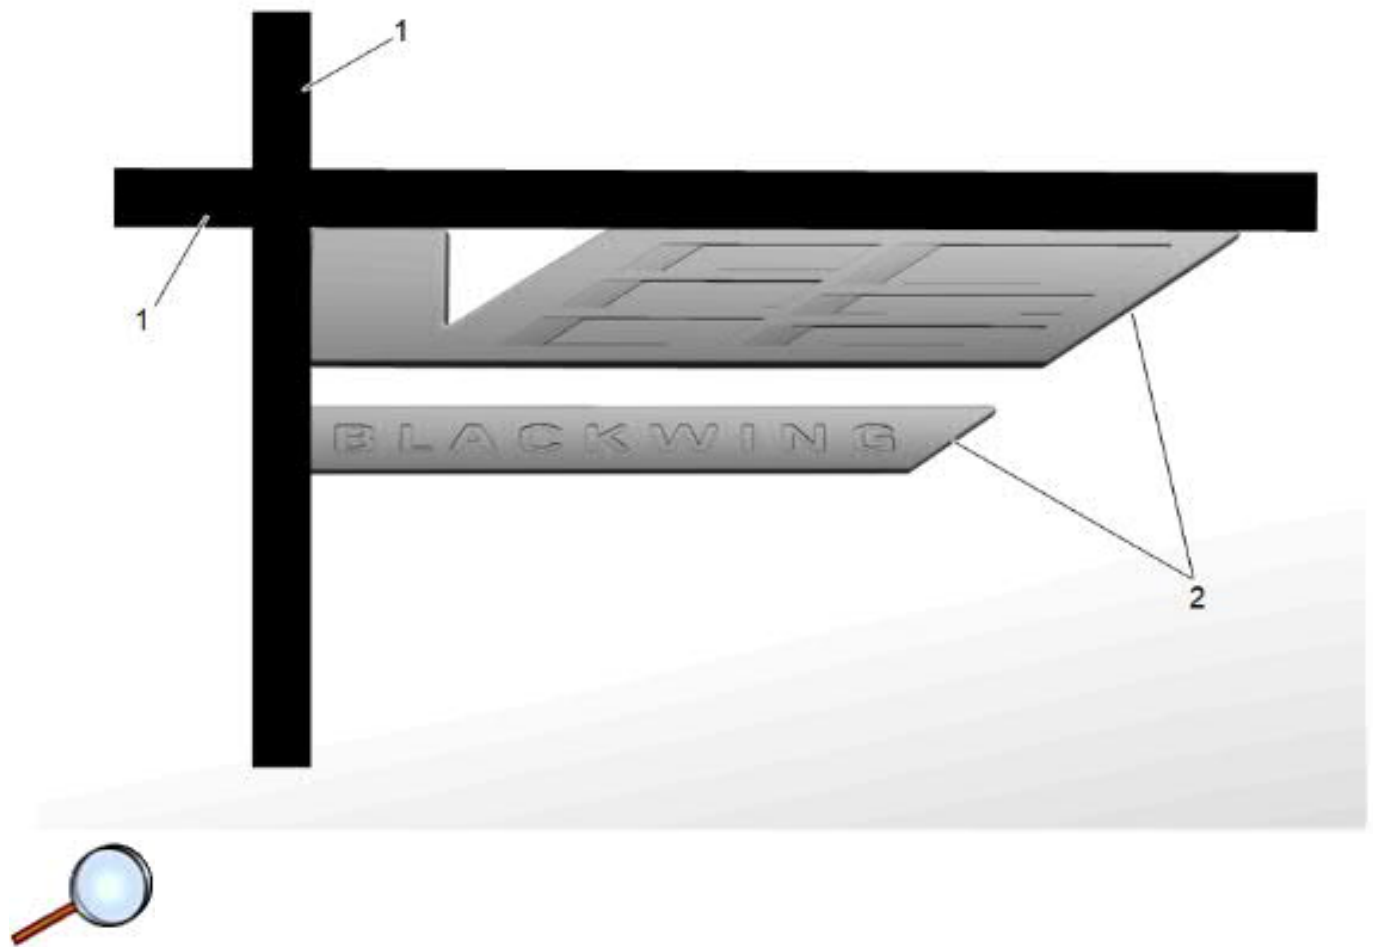


Note: Only install "V Series Blackwing" as a replacement of the existing vehicle content.

1. Apply masking tape (1) around the existing nameplate (2) to be replaced. Tape the left and top edges of the existing nameplate. These will be the locating features for the new accessory nameplate.
2. Use a plastic flat-bladed tool to remove the existing nameplate (2).
3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.

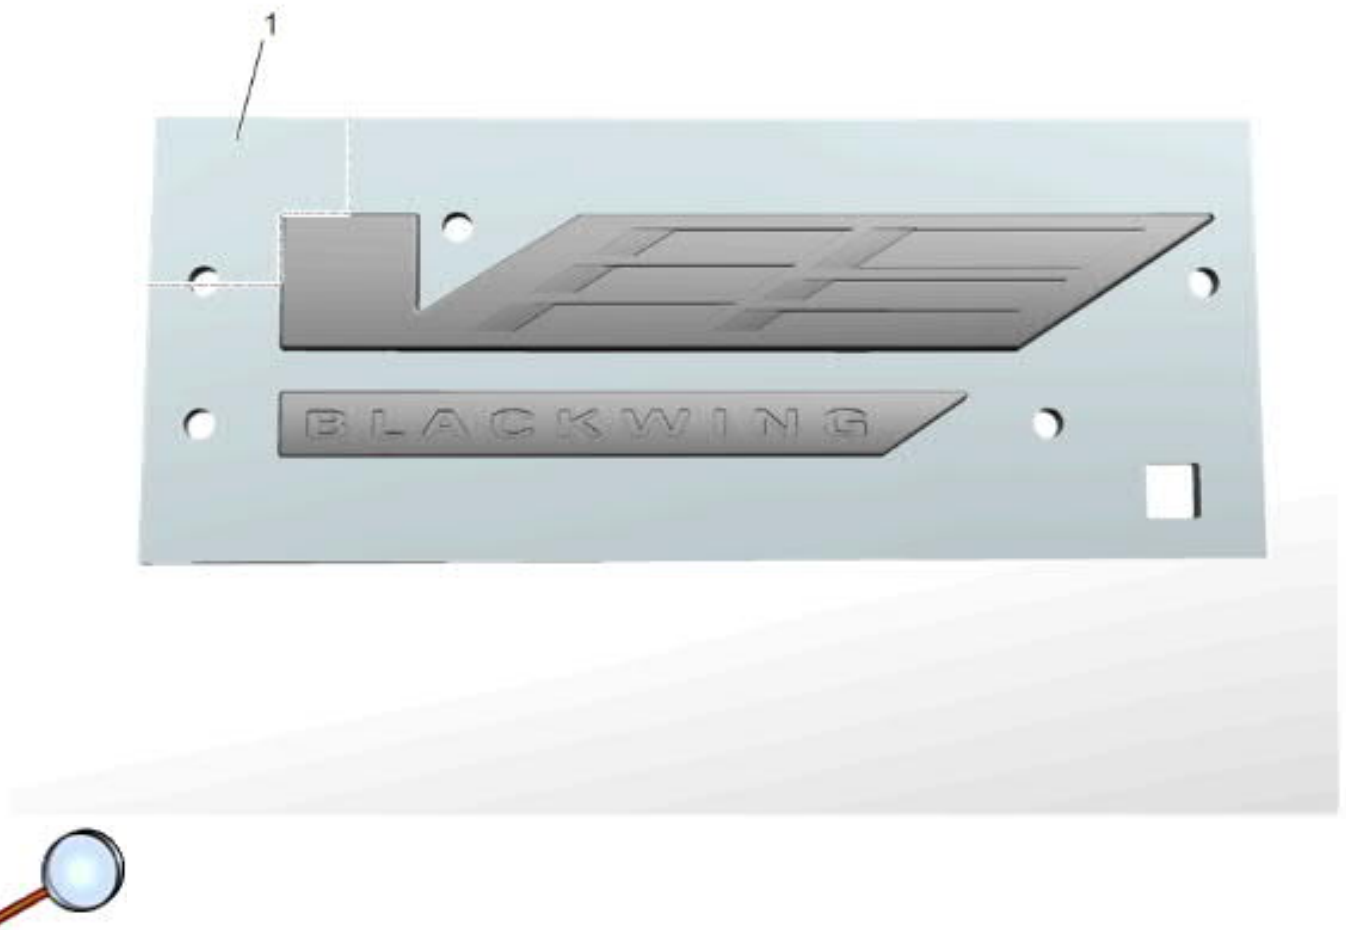


4. Carefully cut out notch (1) as shown in the foam carrier without damaging or misaligning any of the nameplate. The notch will provide point of reference to help align the nameplates to the tape.
5. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.

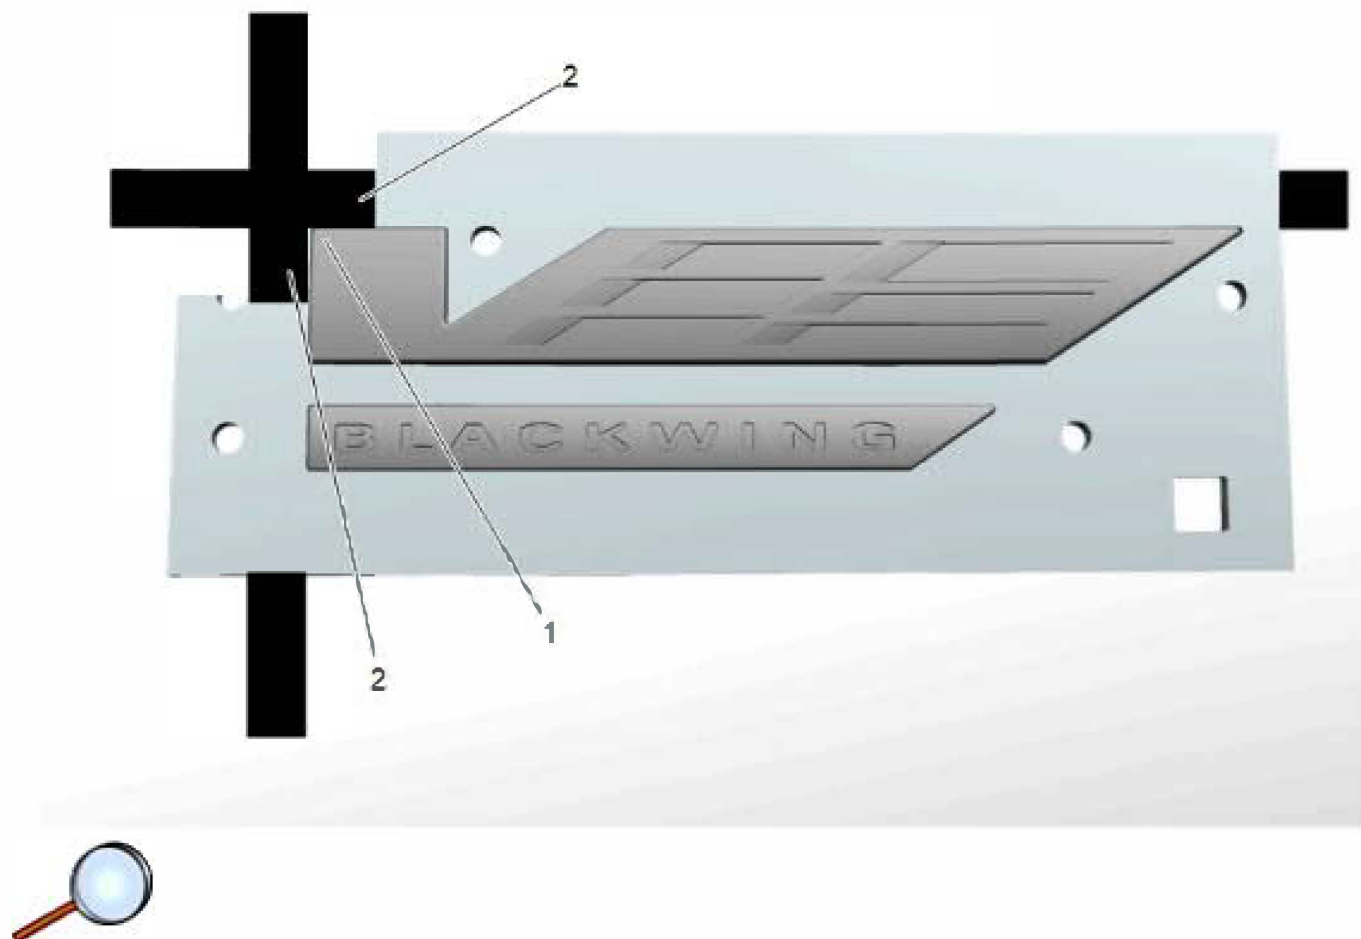

Note: Make sure the foam carrier and nameplate stay together during installation.


6. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the left side and top edge of the nameplate (1) to the masking tape (2). Then, toggle the nameplate into place.
7. Using the palm of the hand or an applicable roller with approximately 10 lbs of pressure, wet out the name plate to the mating surface to ensure full adhesion of the nameplate is made.
8. Remove the foam carrier and the protective liner from the front of the nameplate.
9. Remove masking tape.

Rear Compartment Lid Emblem (350T)

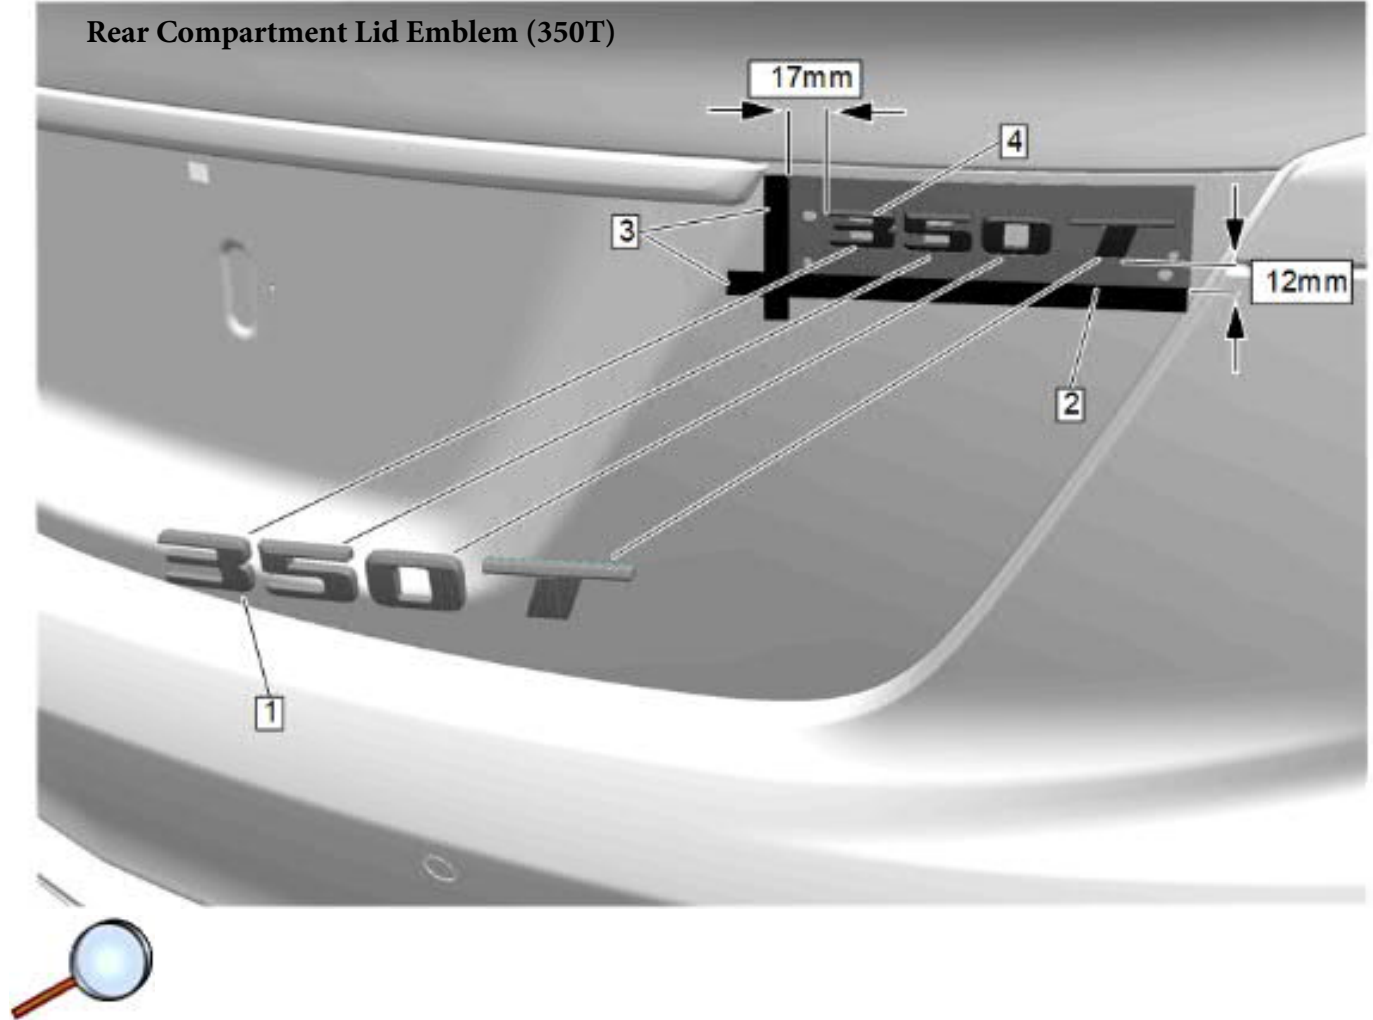

1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 17mm to the left and 12mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.

Rear Compartment Lid Emblem (550T)

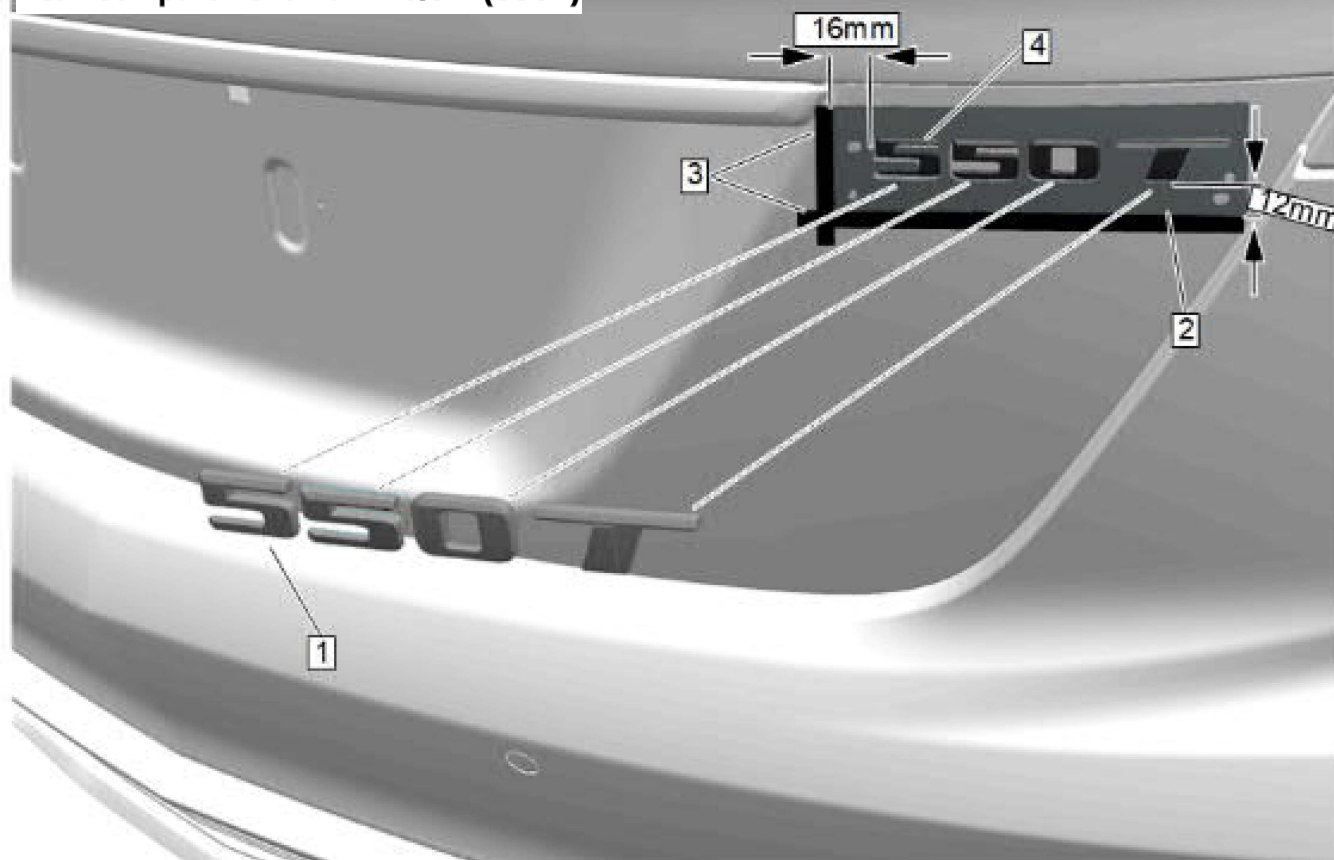

1. Apply masking tape (3) around the existing nameplate to be replaced. The tape needs to be 16mm to the left and 12mm below the existing nameplate. These will be the locating features for the new accessory nameplate.
 2. Use a plastic flat-bladed tool to remove the chrome nameplate (1).
 3. Clean and prep surface completely using an Isopropyl Alcohol Solution with a lint free cloth and allow to dry completely before installation.
 4. Take the nameplate and peel the protective liner from the adhesive backing on the rear of the nameplate. Be careful not to touch the tape with hands and do not allow the tape to come into contact with dirt or any foreign matter prior to adhesion.
- Note:** Make sure the foam carrier and nameplate stay together during installation.
5. **IMPORTANT:** The adhesive will bond quickly to the paint. In the event that the nameplate should be mis-aligned after installation, do not attempt to remove the nameplate as this will cause paint damage. To avoid mis-alignment, do not drop the nameplate into place. Instead, first align the bottom edge of the foam carrier (2) of the nameplate to the masking tape. Then, toggle the nameplate (4) with foam carrier (2) into place.
 6. Using the palm of the hand or an applicable roller, push the nameplate to the mating surface with approximately 10 lbs of pressure to ensure full adhesion of the nameplate.
 7. Remove the foam carrier (2) and the protective liner from the front of the nameplate.
 8. Remove masking tape.